



**C-POWER**  
**Air Circuit Breakers**



# ABOUT US



Switchgear Factory, Navi Mumbai



Switchgear Factory, Ahmednagar



Switchgear Factory, Vadodara

Larsen & Toubro is a technology-driven company that infuses engineering with imagination. The Company offers a wide range of advanced solutions in the field of Engineering, Construction, Electrical & Automation, Machinery and Information Technology.

L&T Switchgear, a part of the Electrical & Automation business, is India's largest manufacturer of low voltage switchgear, with the scale, sophistication and range to meet global benchmarks. With over seven decades of experience in this field, the Company today enjoys a leadership position in the Indian market with a growing international presence.

It offers a complete range of products including powergear, controlgear, industrial automation, building electricals & automation, reactive power management, energy meters, and protective relays. These products conform to Indian and International Standards.

# C-POWER AIR CIRCUIT BREAKERS

L&T's Air Circuit Breakers (ACBs) are specially designed for extreme tropical conditions and have a proven track record of more than 45 years. Presently more than 5,00,000 Air Circuit Breakers supplied by L&T are being used for diverse applications. The **C-POWER** Air Circuit Breakers provide technologically driven solutions to meet customer needs.



## Complete selectivity

Unique feature of  $I_{cu}=I_{cs}=I_{cw}$  for 1 second across the entire range. This ensures complete selectivity for system with time based discrimination.

## Perfect for Indian conditions

Inherent design to perform in extreme tropical conditions. Typical site conditions like high ambient temperature, humidity and dusty environment are best handled by **C-POWER** ACBs without compromising on performance and safety.

## Optimal compactness

Designed to ensure

- Low inherent temperature rise
- Adequate interface clearances

## Widest choice of over current protection releases

- Advance micro-controller based with option of communication & metering-SR71
- Micro processor based releases-SR18/SR18G/SR21i/SR18G & SR18Gi with current metering
- Thermo-magnetic release-DN1

## Elegant design & rugged construction

- Common door cutout for entire range
- Left aligned cutout for all ratings

## Range to meet every customer's need

Various options to choose from

- Breaking capacity from 50kA to 100kA
- 3 Pole or 4 Pole configuration
- Fixed or Drawout version
- Auto reset mechanism
- Independent manual or stored energy type, manual or electrically operated mechanism
- Different terminal orientations : Flat, Horizontal and Vertical

## New user friendly feature

- Operational Counter will be standard offering from rating 4000A and above

## User friendly features

- **Front accessible** over current release settings, telescopic racking handle and various racking interlocks; no need to open the panel door
- Unique '**Maintenance position**' in drawout type ACBs to facilitate maintenance & inspection without removing ACB from the panel
- **Multitap CTs** for enhancing protection range in DN1 release
- **Wide variety** of Amperemetric and Voltmetric releases
- **Fully rated neutral pole** for the entire range
- Lockable **sliding shutters** to prevent unauthorized access to "TRIP" and "CLOSE" push buttons
- Can be used as an **ON / OFF Load Isolator**
- Extendable **Electrical Life**:
  - By replacing the arcing contacts at site, for all ratings
  - Without changing pole assembly
- **Programmable SICs**: Auxiliary contacts in drawout ACBs are programmable for only Service, Only Test, Test and Service, and All Positions
- Protection releases are easily **interchangeable** at site
- Facility for site conversion of **manually operated** ACBs to **electrically operated** ACBs
- Jaws on breaker facilitate ease of maintenance & replacement of contact jaws

## Safety

- "CE" marked for C, S1 & H ranges
- Superior quality engineering grade plastics used for insulation purpose; conforms to **Glow wire test** (Ref: IEC 60695-2-1)
- In-built **mechanical anti-pumping** to prevent auto-reclosing of ACB on persisting faults
- In-built **rating error preventor** in drawout ACBs ensure correct rating of drawout portion in corresponding cradle
- **Safety shutters** prevent accidental contact with live cradle terminals
- Variety of **Safety Interlocks**
- Easily removable **arc chutes** without use of any tool
- Operating voltage ranges from **10% Un to 110% Un** for shunt release ensures intentional tripping even at high voltage drops during short-circuit
- Transparent safety shutter offers easy inspection of cradle contacts & reduces the maintenance time

## Conformance to standards

- IEC - 60947 (Part 1 & 2)
- IS/IEC - 60947 (Part 1 & 2)
- IEC 60695 - 2 - 1
- BS EN 60947 - 2

## Special applications

### 690V Application for C Power ACB

Solution for 690V application available in C Power Family. For further details please consult our nearest branch office.

### Breakers for Corrosive Environment

Solution for harsh/corrosive environment available in C Power Family. For further details please consult our nearest branch office.

# C-POWER RANGE



## Breaking capacities:

Icu = Ics = Icw for 1 sec

Rated Current	400A	630A	800A	1000A	1250A	1600A	2000A	2500A	3200A	4000A	5000A	6300A	
CN-CS : E	50kA	50kA	50kA	50kA	50kA	50kA	50kA						
	Frame-1												
CN-CS : S1	50kA	50kA	50kA	50kA	50kA	50kA	50kA	60kA	60kA				
	Frame-1							Frame-2					
CN-CS : C			50kA	50kA	50kA	50kA	55kA	60kA				95kA	95kA
CN-CS : H			65kA	65kA	65kA	65kA	75kA	75kA					
CN-CS : H2 <b>NEW</b>									75kA	75kA			
CN-CS : H1/H									100kA	100kA			
	Frame-1					Frame-2		Frame-3		Frame-4			

Note : 3200A H2 / 4000A H2 will replace 3200A H0 / 4000A H0. Spares for 3200 / 4000 A H0 will be available.

# TECHNICAL DATA SHEET



Rating (A)	400	630	400/630	800				1000				1250				1600				2000				2500			3200				4000			5000	6300			
Type Designation	E#	E#	S1	E#	S1	C	H	E#	S1	C	H	E#	S1	C	H	E#	S1	C	H	E#	S1	C	H	S1	C	H	S1	D	H2	H1	H2	H	C	C	C			
Rated current (A) at 50°C $I_n$	400	630		800				1000				1250				1600				2000				2500			3200				4000			5000	6300			
Rated operational voltage (V), 50/60Hz $U_o^*$	415	415		415				415				415				415				415				415			415				415			415	415			
Rated insulation voltage (V), 50/60Hz $U_i$	1000	1000		1000				1000				1000				1000				1000				1000			1000				1000			1000	1000			
No. of poles	3	3	3/4	3	3/4			3	3/4			3	3/4			3	3/4			3	3/4			3/4			3/4				3/4	3/4						
Rated ultimate short circuit breaking capacity 50/60Hz (kA rms) $I_{cu}$	380/415/500V	50	50	50	50	50	65	50	50	50	65	50	50	50	65	50	50	50	65	50	50	55	75	60	60	75	60	70	75	100	75	100	70	95	95			
	690V	-	-	-	-	-	35	50	-	-	35	50	-	-	35	50	-	-	35	50	-	-	40	65	-	40	65	-	Δ	65	85	65	85	Δ	Δ	Δ		
Rated service short circuit breaking capacity 50/60Hz (kA rms) $I_{cs}$	380/415/500V	50	50	50	50	50	65	50	50	50	65	50	50	50	65	50	50	50	65	50	50	55	75	60	60	75	60	70	75	100	75	100	70	95	95			
	690V	-	-	-	-	-	35	50	-	-	35	50	-	-	35	50	-	-	35	50	-	-	40	65	-	40	65	-	Δ	65	85	65	85	Δ	Δ	Δ		
Rated short time withstand capacity 50/60Hz (kA rms) $I_{cw}$	0.5 sec	50	50	50	50	50	65	50	50	50	65	50	50	50	65	50	50	50	65	50	50	55	75	60	60	75	60	70	75	100	75	100	70	95	95			
	1 sec	50	50	50	50	50	65	50	50	50	65	50	50	50	65	50	50	50	65	50	50	55	75	60	60	75	60	70	75	100	75	100	70	95	95			
	3 sec	-	-	25	-	25	35	50	-	25	35	50	-	25	35	50	-	35	35	50	-	45	50	65	50	55	65	55	Δ	70	85	70	85	70	Δ	Δ		
Rated making capacity 50/60Hz (kA peak) $I_{cm}$	380/415/500V	105	105	105	105	105	143	105	105	105	143	105	105	105	143	105	105	105	143	105	105	121	165	132	132	165	132	154	165	220	165	220	154	209	209			
	690V	-	-	-	-	-	73.5	105	-	-	73.5	105	-	-	73.5	105	-	-	73.5	105	-	-	84	143	-	84	143	-	Δ	143	187	143	187	Δ	Δ	Δ		
Rated impulse withstand voltage of main circuit (kV) $U_{imp}$	8	8	12	8	12			8	12			8	12			8	12			8	12			12			12				12	12						
Rated impulse withstand voltage of aux. circuit (kV) $U_{imp}$	4	4		4				4				4				4				4			4			4				4	4							
Typical opening time (ms)	40	40		40				40				40				40				40			40				40	40										
Typical closing time (ms)	60	60		60				60				60				60				60			60				60	60										
Utilization category	B	B		B				B				B				B				B			B				B	B										
Suitability for isolation	✓	✓		✓				✓				✓				✓				✓			✓				✓	✓										
Fixed	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	x	✓	✓	x	✓	✓	x	✓	x	x	x	x	✓	x	x		
Draw out	x	x	✓	x	✓	✓	✓	x	✓	✓	✓	x	✓	✓	✓	x	✓	✓	✓	x	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	
Manual	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Electrical	x	x	✓	x	✓	✓	✓	x	✓	✓	✓	x	✓	✓	✓	x	✓	✓	✓	x	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓
Electrical & Mechanical life (operating cycles) †	15000	15000	20000	15000	20000			15000	20000			20000				20000				20000				20000			10000	5000	10000	10000			5000	5000	5000	5000	5000	
Electrical life without maintenance	6000	6000	8000	6000	8000	8000	8000	6000	8000	8000	8000	6000	7000	7000	7000	6000	7000	7000	7000	4500	6000	6000	6000	5000	5000	5000	5000	2500	5000	5000	5000	5000	2500	2500	2500			
Dimensions (in mm)	Fixed	H	385	385	394	385	394		385	394			385	394			385	-	394		-	394		-	394			509	Δ	Δ	509	-	-					
		W	3 Pole	316	316	326	316	326		316	326			316	326			316	-	482		-	482		-	482			636	Δ	Δ	636	-	-				
			4 Pole	-	-	414	-	414		-	414			-	414			-	628		-	628		-	628			838	Δ	Δ	838	-	-					
		D	449	449	443	449	443	431	449	443	431	449	443	431	437	431	437	-	431		-	431		-	431			518	Δ	Δ	518	-	-					
Draw out	H	-	-	468	-	468		-	468			-	468			-	468		468	468		468	468			468	583	468	468	468	583	583	583	583				
	W	3 Pole	-	-	399	-	399		-	399			-	399			-	399		399	555		555	555			555	711	701	701	711	913	913					
		4 Pole	-	-	487	-	487		-	487			-	487			-	487		487	701		701	701			701	913	909	909	913	1182	1182					
	D	-	-	587	-	587		-	587			-	587			-	587		587	587		587	587			612	652	607	607	678	691	691						

\* Please consult us for application at dc voltages & higher operational voltage upto 690V AC.  
# Available in Control Box version

† Electrical life = Mechanical life. However, arcing contacts need to be replaced depending upon wear & tear.  
Δ Please consult us.

New H2 range has replaced old HO range

# PROTECTION RELEASES

## Thermo-magnetic Release Type - DN1

DN1 thermo-magnetic release offers reliable protection against overload, short-circuit and earth faults via multitap Cts. with ambient temperature compensation from -5°C to 50°C.

### Protection

#### Overload Protection (Phase)

- Unique individual phase O/L setting adjustment helps to avoid the nuisance tripping of ACBs in unbalance load condition (due to single phase loads) on distribution transformer. Overload pick-up range: 0.75 to 1 times  $I_n$

#### Short-Circuit Protection

- Two taps on CTs (working as rating plug) help in selecting operating threshold. Short-Circuit pickup range: 5.5 and 7.5 times  $I_n$  with minimum impulsion time of 25 ms to prevent nuisance tripping due to transients

#### Earth Fault Protection

- Offered with auxiliary earth fault release module. Earth-fault pick-up range: 0.2 to 0.5 times  $I_n$



## Microprocessor Based Release - SR18 & SR18G

### Salient Features

- Self-powered & true RMS sensing
- Comprehensive protection
  - SR18: Overload (Phase) and Short-Circuit
  - SR18G: Overload (Phase), Short-Circuit and Earth fault protection
- True Hot & Cold characteristics & switchable thermal memory
- Multi-state LED to indicate
  - Power ON condition
  - Test mode
- Individual fault annunciation through LEDs
- AN1 module for remote fault indication through LEDs with changeover contact for each kind of fault
- Provision for Self-diagnostic test (without tripping the breaker)
- Test kit (SRT-2) available for testing the releases
- Conformance to EMI/EMC standards



Type of Protection	Setting Range	
	Pick-up Current	Time Delay
Overload (Phase)	$I_r$ - 0.5 to 1.0 times $I_n$ Steps : 0.50, 0.60, 0.65, 0.70, 0.75, 0.80, 0.85, 0.9, 0.95, 1.00	2.5 sec at 6 times $I_r$
Short-Circuit	2 to 10 times $I_n$ Steps : 2, 3, 4, 5, 6, 7, 8, 9, 10	20 ms to 600 ms Steps: 20, 60, 100, 160, 200, 260, 300, 400, 500, 600 ms
Instantaneous	6 & 12 $I_n$	-
Earth Fault*	0.2 to 0.6 times $I_n$ Steps : 0.2, 0.3, 0.4, 0.5, 0.6	100 to 400 ms Steps : 100, 200, 300, 400 ms & OFF

\* Available in SR18G release only  
In 3 phase, 4 wire system, Neutral CT is required for earth fault protection.

# PROTECTION RELEASES

## Microprocessor Based Release - SR18G with display

### Salient Features

- Self –powered & True RMS sensing
- True Hot & Cold characteristics & switchable Thermal Memory
- Unique 3 line O-LED display (Organic LED)
- Offers comprehensive protection against Overload - Phase & Neutral, Short-Circuit, Instantaneous, Earth Fault
- Settable Overload delay
- Settable Instantaneous setting with provision of “OFF”
- $I^2t$  ON/OFF for Short-Circuit and Earth Fault protection
- Individual Fault LED indication
- Provision for Self-diagnostic test
- Conformance to EMI/EMC standards
- Testing through Test kit
- Separate version with Zone Selective Interlocking (ZSI) - SR18Gi with display



Type of Protection	Setting Range	
	Pick-up current	Time Delay
Overload (Phase)	$I_r$ - 0.5 to 1.0 times $I_n$ Steps : 0.50, 0.60, 0.65, 0.70, 0.75, 0.80, 0.85, 0.90, 0.95, 1	0.2 to 30 sec at 6 times $I_r$ Steps : 0.2, 0.5, 1.5, 2, 3.5, 6, 12, 17, 30 sec
Overload (Neutral)	$I_N$ -50% to 200% times $I_r$ Steps : 50%, 100%, 150%, 200%	Same as Overload (Phase)
Short-Circuit	2 to 10 times $I_n$ Steps : 2, 3, 4, 5, 6, 7, 8, 9, 10	$I^2t$ ON = 0.02, 0.1, 0.2, 0.3, 0.4 sec $I^2t$ OFF = 0.02, 0.1, 0.2, 0.3, 0.4, sec
Instantaneous	2 to 16 times $I_n$ Steps : 2, 3, 4, 6, 8, 10, 12, 14, 16, OFF	-
Earth fault*	0.2 to 0.6 times $I_n$ Steps : 0.2, 0.3, 0.4, 0.5, 0.6	$I^2t$ ON = 0.1, 0.2, 0.3, 0.4 sec $I^2t$ OFF = 0.1, 0.2, 0.3, 0.4, 1 sec

\*In 3 phase, 4 wire system, Neutral CT is required for earth fault protection

## Test-kit UN-ES1

### Salient Features

- Test-kit for SR18G/SR18Gi with display
- Operates from 230V AC supply & generates single-phase voltage test signals
- Tests the release for
  - Phase fault i.e. for overload, short-circuit and instantaneous protection
  - Earth fault protection
- Test current multiples
  - For phase faults: 2.5  $I_n$ , 4.5  $I_n$ , 6.5  $I_n$ , 9.5  $I_n$ , 11  $I_n$ , 13  $I_n$
  - For earth fault: 0.25  $I_n$ , 0.35  $I_n$ , 0.45  $I_n$ , 0.55  $I_n$
- Five 7-segments LED display indicates the trip time (two places after decimal)



# PROTECTION RELEASES

## Microprocessor Based Release - SR21i



### Salient Features

- Self-powered & True RMS sensing
- Inbuilt Zone Selective Interlocking (ZSI)
- Provision for Self-diagnostic test (without tripping the breaker)
- True Hot & Cold characteristics & switchable Thermal Memory
- Multi-state LED to indicate
  - Power ON condition
  - Test mode
- Individual fault annunciation through LEDs
- Provision for AN1 module for remote fault indication through LEDs with changeover contact for each kind of fault
- Direct tripping of breaker-reliable tripping with minimum time delay
- Test kit available for testing the release (SRT-2)
- Realistic hot and cold curves which take into account integrated heating effect
- Conformance to EMI/EMC standards

Type of Protection	Setting Range	
	Pick-up Current	Time Delay
Overload (Phase)	$I_r - 0.5$ to $1.0$ times $I_n$ Steps : 0.50, 0.60, 0.65, 0.70, 0.75, 0.80, 0.85, 0.9, 0.95, 1.00	$0.2$ to $30$ sec. at $6$ times $I_r$ Steps : 0.2, 0.5, 1, 1.5, 2, 3.5, 6, 12, 17, 30 Sec
Short-Circuit	$2$ to $10$ times $I_n$ Steps : 2, 3, 4, 5, 6, 7, 8, 9, 10	$20$ ms to $600$ ms Steps : 20, 60, 100, 160, 200, 260, 300, 400, 500, 600 ms
Instantaneous	$2$ to $16$ times $I_n$ Steps : 2, 3, 4, 6, 8, 10, 12, 14, 16, OFF	-
Earth Fault*	$0.2$ to $0.6$ times $I_n$ Steps : 0.2, 0.3, 0.4, 0.5, 0.6	$100$ to $400$ ms Steps : 100, 200, 300, 400 ms & OFF

\* In 3 phase, 4 wire system, Neutral CT is required for earth fault protection.

## Test-kit SRT-2

### Salient Features

- Test-Kit for SR18/SR18G/SR21i Releases
- Operates from 230V AC supply & generates single-phase voltage test signals
- Tests the release for
  - Phase fault i.e. for overload, short-circuit and instantaneous protection
  - Earth fault protection
- Test current multiples
  - For phase faults:  $2.5 I_n$ ,  $4.5 I_n$ ,  $6.5 I_n$ ,  $9.5 I_n$ ,  $11 I_n$ ,  $13 I_n$
  - For earth fault:  $0.25 I_n$ ,  $0.35 I_n$ ,  $0.45 I_n$ ,  $0.55 I_n$
- Five 7-segments LED display indicates the trip time (two places after decimal)



# PROTECTION RELEASES

## Microprocessor-based, Communication-capable Release - SR71

### Salient Features

- True RMS sensing
- Offers comprehensive protection for overload, short-circuit, instantaneous, earth fault and neutral overload
- High resolution backlit LCD display
- Intelligent Pre-trip alarm to prevent system shutdown
- Password protected settings and commands
- MODBUS RTU protocol with intrinsic RS 485 port
- LED indication for POWER ON, different faults and Pre-trip alarm
- 2 sets of storable protection settings
- Last 5 trips & 128 Event records with time & date stamping
- 3 programmable contacts-1 for micro controller failure, 2 for basic fault annunciation
- 4 relay contacts for indication of exceeding maximum demand, Pre-trip alarm and control on breaker (closing and opening)
- Rating-plug for precise protection at lower load currents
- Auto-doubling features to prevent nuisance tripping
- Selectable  $I^2t$  based current for short-time and earth fault zones
- Thermal reflectivity enables faster tripping on recurrent overloads
- Inbuilt Zone Selective Interlocking
- Provision for Self-diagnostic test
- Conformance to EMI/EMC standards



Parameter		Screen Abbreviation	Details	Factory Settings	
Overload (Phase)	Current Settings (A), $I_r = I_n \times \dots$	PICK-UP	0.4 to 1.0 $I_n$ in steps of 0.05 $I_n$	1.0 $I_n$	
	Time Delay, $T_r$ (sec) at 6 x $I_r$	TMS-Tr	0.5-1-2-4-6-12-18-24-30	30 sec	
	Pre-trip Alarm Settings	PREALAR	0.5 to 0.95 $I_r$ in steps of 0.05 $I_r$	0.95 $I_r$	
	Thermal Reflectivity	THM-MEM	ON / OFF	OFF	
	Function	FUNC	Enable / Disable		
Neutral Fault	Current Settings (A), $I_n = I_{rx} \dots$	PICK-UP	0.5-1.0	1.0 $I_r$	
	Time Delay (sec)	DELAY	Same as 'Overload (Phase)'	30 sec	
Short-Circuit	Current Settings (A), $I_{sd} = I_n \times \dots$	PICK-UP	2 to 10 $I_n$ in steps of 0.5 $I_n$	10 $I_n$	
	Time Delay, $t_{sd}$ (msec) at 10 x $I_n$	$I^2t$ OFF	DELAY	20-100-200-300-400	400 msec
		$I^2t$ ON	DELAY	20-100-200-300-400	400 msec
	Pre-trip Alarm Settings	PREALAR	0.5 to 0.95 $I_s$ in steps of 0.05 $I_s$	0.95 $I_s$	
	$I^2t$	$I^2t$	ON / OFF		
	Cold-load Pick-up	COLDPIC	Enable / Disable	Disable	
	Cold-load Pick-up Delay	CP-DLY	0.1 to 10 sec in steps of 0.1 sec	0.1 sec	
Instantaneous	Function	FUNC	Enable / Disable	Enable	
	Current Settings (A), $I_i = I_n \times \dots$	PICK-UP	2 to 16 $I_n$ in steps of 0.1 $I_n$	16 $I_n$	
Earth Fault	Function	FUNC	Enable / Disable	Enable	
	Current Settings (A), $I_g = I_n \times \dots$	PICK-UP	0.1 to 0.6 in steps of 0.05 $I_n$ for $I^2t$ ON	0.6 $I_n$	
			0.1 to 0.6 in steps of 0.01 $I_n$ for $I^2t$ OFF		
	Time Delay (sec), $t_g$	DELAY	100 to 400 msec in steps of 100 msec for $I^2t$ ON	3 sec	
			0.1 to 5 sec in steps of 100 msec for $I^2t$ OFF		
	Pre-trip Alarm Settings	PREALAR	0.5 to 0.95 $I_g$ in steps of 0.05 $I_g$	0.95 $I_g$	
$I^2t$	$I^2t$	ON / OFF	OFF		
Cold-load Pick-up	COLDPIC	Enable / Disable	Disable		

Note: Both Protection Groups 1 & 2 carry the same factory settings.

# ADDITIONAL PROTECTIONS

Parameter		Screen Abbreviation	Details	Factory Settings
Under Current	Function	FUNC	Enable / Disable	Disable
	Current Setting (A) x In	PICK-UP	15% to 80% in steps of 5% In	0.8 In
	Time Delay (secs)	DELAY	1 to 255 in steps of 1 second	1 second
	Trip / Alarm	MODE	Either / Both	Alarm
Current Unbalance	Function	FUNC	Enable / Disable	Disable
	Current Setting (A) x In	PICKUP	10% to 95% in steps of 5% In	0.2 In
	Time Delay (secs)	DELAY	1 to 10 in steps of 5 secs	2.0 secs
Over Voltage #	Function	FUNC	Enable / Disable	Disable
	Voltage Setting (V) Vs = Vn x ..	PICK-UP	105% to 150% in steps of 5% Vn	1.2 Vn
	Time Delay (secs)	DELAY	0.1 to 100 in steps of 0.1 secs	5.0 secs
	Reset Voltage	RSTSET	85% to 98% in steps of 1% Vs	0.95 Vs
	Trip / Alarm	MODE	Either / Both	Alarm
Under Voltage #	Function	FUNC	Enable / Disable	Disable
	Voltage Setting (V) Vn x ..	PICK-UP	45% to 65% in steps of 5% Vn	0.6 Vn
	Time Delay (secs)	DELAY	0.1 to 5 in steps of 0.1 secs	1 second
	Reset Voltage	RSTSET	102% to 115% in steps of 1% Vs	1.02 Vs
	Trip / Alarm	MODE	Either / Both	Alarm
Under Frequency #	Function	FUNC	Enable / Disable	Disable
	Frequency Setting (Hz)	PICK-UP	45 to 50Hz for 50Hz in steps of 0.01Hz	48.0Hz
			57 to 60Hz for 60Hz in steps of 0.01Hz	59.0Hz
	Time Delay (secs)	DELAY	0.1 to 100 secs in steps of 0.1 Second	0.2 secs
	Drop Off Frequency	DRPOFF	0.02 to 0.10Hz in steps of 0.1Hz	0.1Hz
Trip / Alarm	MODE	Either / Both	Alarm	
Over Frequency #	Function	FUNC	Enable / Disable	Disable
	Frequency Setting (Hz)	PICK-UP	50 to 55Hz for 50Hz in steps of 0.01Hz	52.0Hz
			60 to 62Hz for 60Hz in steps of 0.01Hz	61.0Hz
	Time Delay (secs)	DELAY	0.1 to 100 secs in steps of 0.1 second	0.2 secs
	Drop Off Frequency	DRPOFF	0.02 to 0.10Hz in steps of 0.1Hz	0.1Hz
Trip / Alarm	MODE	Either / Both	Alarm	
Reverse Power #	Function	FUNC	Enable / Disable	Disable
	Settings (kW)	PICK-UP	0.02 to 0.4 in steps of 0.01 Pn	0.2 Pn
	Time Delay (secs)	DELAY	1 to 100 in steps of 0.1 secs	2.0 secs
	Trip Alarm	MODE	Either / Both	Alarm
Phase Sequence #	Function	FUNC	Enable / Disable	Disable
	Settings	PICK-UP	123 - 132	123
	Time Delay (secs)	DELAY	0 to 5 in steps of 0.5 secs	2 secs
	Trip / Alarm	MODE	Either / Both	Alarm
Breaker Failure	Function	FUNC	Enable / Disable	Disable
	Time Delay (secs)	DELAY	0.05 to 2 secs in steps of 0.01 secs	1.0 second
Maximum Demand Exceed	Function	FUNC	Enable / Disable	Disable
	Settings (kW)	PICK-UP	40 kW - 1600 kW	100 kW
	Step	DELAY	10 kW - 1000 kW	10 kW
<i>i</i> - Discrimination		<i>i</i> -Discrimination	Enable / Disable	Disable

# Requires SR71-PM module

# METERING

Parameter	Screen Abbreviation	Details
Current	I	Phase, Earth and Neutral
	I <sub>max</sub>	Maximum running Current per Phase
	%Load	Percent Loading
Voltage#	V	Phase-Neutral
	V <sub>ph</sub> -V <sub>ph</sub>	Phase-Phase
Frequency #	F	System Frequency
Power Factor #	PF	System Power Factor
Power #	kW	Active Power per Phase and Total (kW)
	kVA <sub>r</sub>	Reactive Power per Phase and Total (kVA <sub>r</sub> )
	kVA	Apparent Power per Phase and Total (kVA)
	kW	Maximum Demand (kW)
Energy #	kWh	Total Active Energy (kWh)
	kVA <sub>r</sub> h	Total Reactive Energy (kVA <sub>r</sub> h)
	kVAh	Total Apparent Energy (kVAh)
Harmonic-Current	I1HAR	R-Phase Current Harmonics
	I2HAR	Y-Phase Current Harmonics
	I3HAR	B-Phase Current Harmonics
Harmonic-Voltage #	V1HAR	R-Phase Voltage Harmonics
	V2HAR	Y-Phase Voltage Harmonics
	V3HAR	B-Phase Voltage Harmonics
Display		High Resolution Backlit LCD


# Requires SR71-PM module

## ADDITIONAL FEATURES


Parameter	Screen Abbreviation	Details
LED Indications	Auxiliary Power ON	✓
	Overload	✓
	Short-Circuit	✓
	Instantaneous	✓
	Earth Fault	✓
	Neutral Fault	✓
	Trip	✓
	Alarm	✓
Auxiliary Supply		24V DC
Digital Inputs		4 Nos.
Output Relays		3 Internal + 4 External Relays
		240V AC / 5A, 30V DC / 5A (resistive load)
Rating Plug	In Multiplier	630-800-1000-1250-2000-3200-5000
Communication	Protocol	MODBUS RTU
	Link used	RS 485
Maintenance Indication		I <sup>2</sup> t based
Event Records (128)		Pick-up, Alarm, Trip, Date, Time and Cause of Event, voltage and current readings in all phases
Trip Records		Last 5 records with date and time stamping,
Testing	Self-Diagnostic Test	✓
Supplementary Modules	Communication Module (SR71-COM)	MODBUS RTU using RS 485
	Power Supply Module (UN-PS)	Input : 26V to 60V DC, 90 to 300V AC/DC Output : 24V DC
	Power Metering Module (SR71-PM)	240V AC, 415V AC
	Relay Module (SR71-REL)	4 Relay Outputs (Breaker OPEN, Breaker CLOSE, Pre Trip alarm and MD Exceed)
No. of Storable Settings		2

# PROTECTION CHARACTERISTIC

## Time-current (DN1)

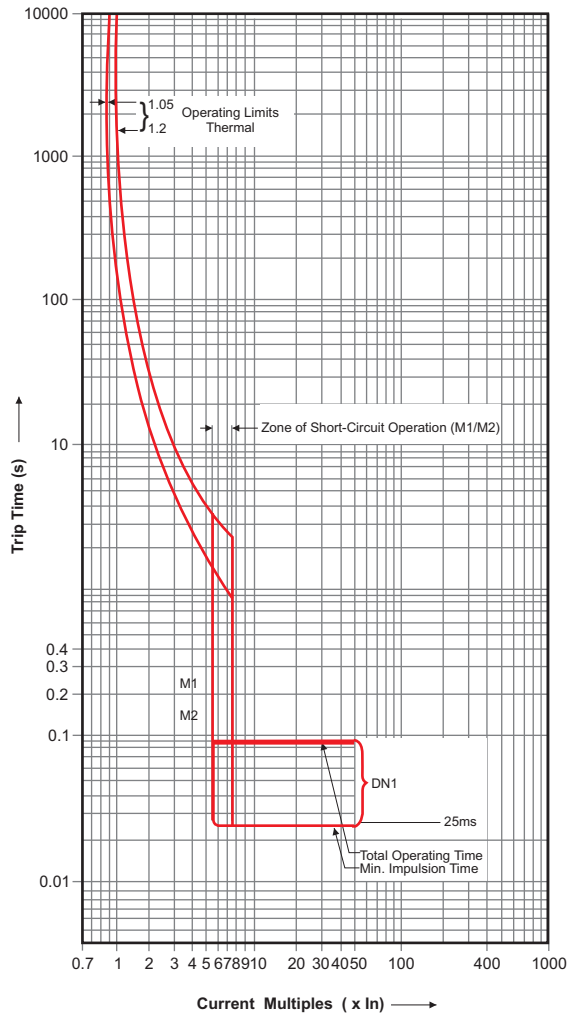


## Overload (SR18/18G)

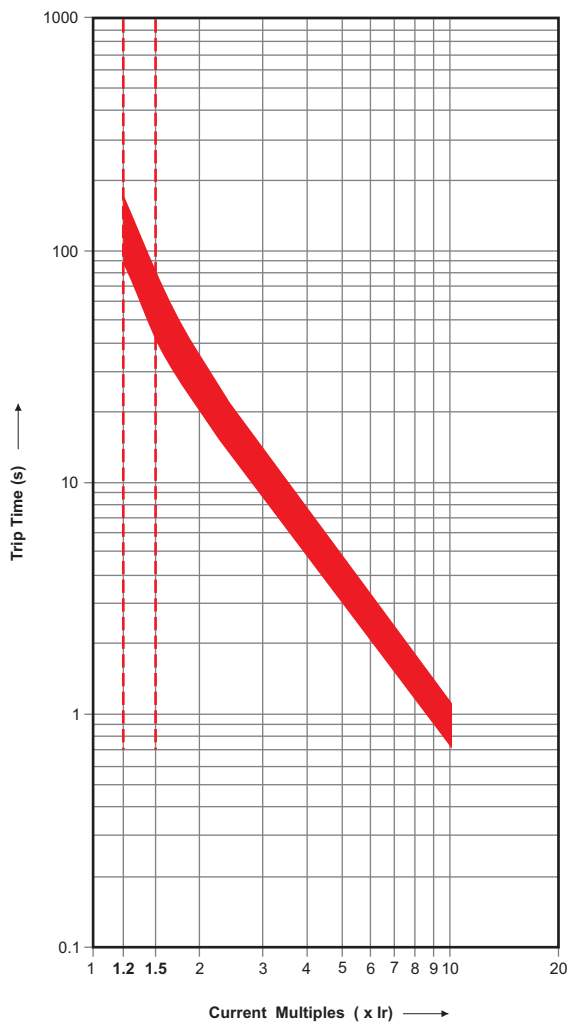


# PROTECTION CHARACTERISTIC

### Short-Circuit (SR18/18G)

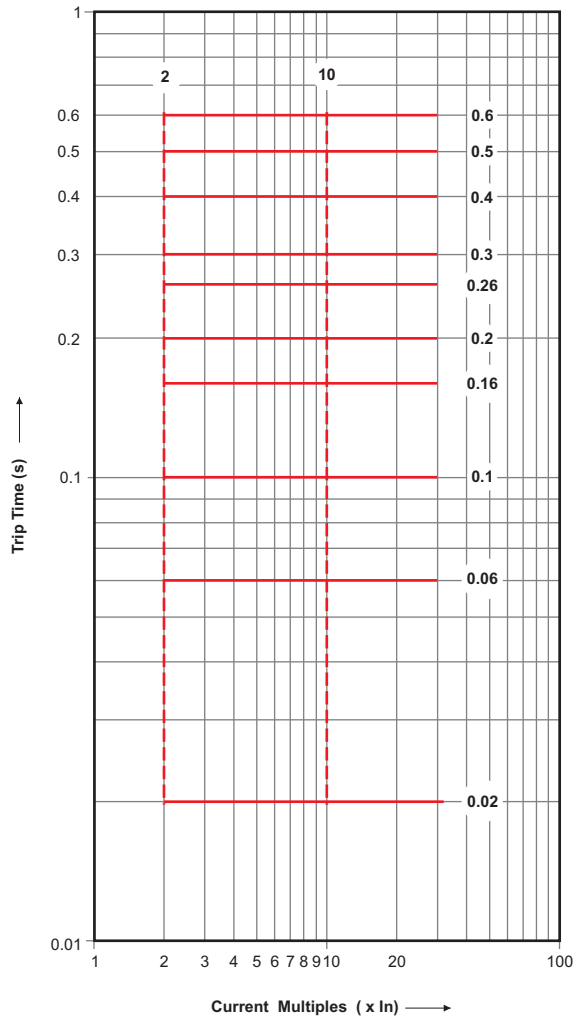


### Earth Fault (SR18G)

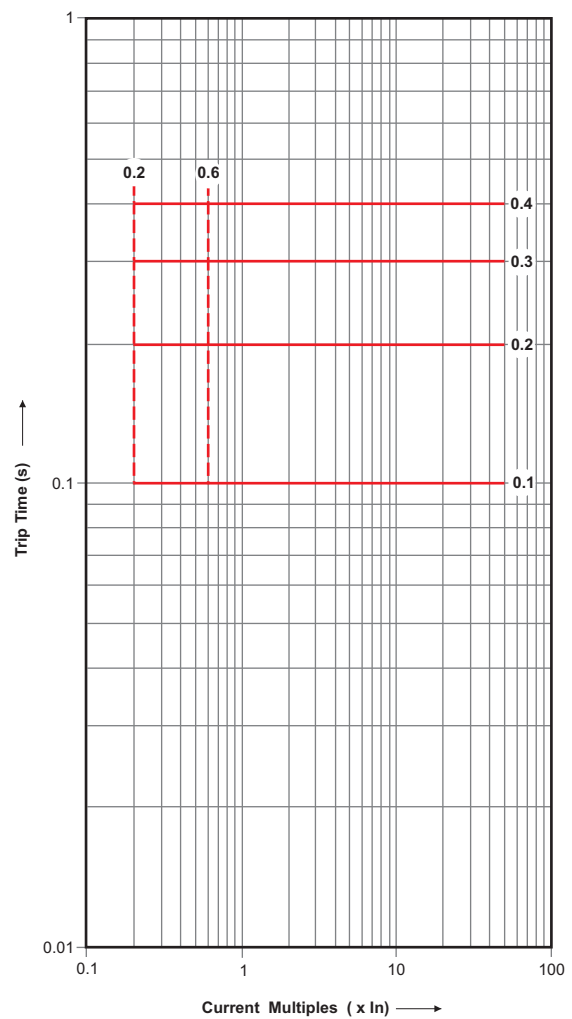


# PROTECTION CHARACTERISTIC

**Overload**  
(SR18G/SR18Gi with display)

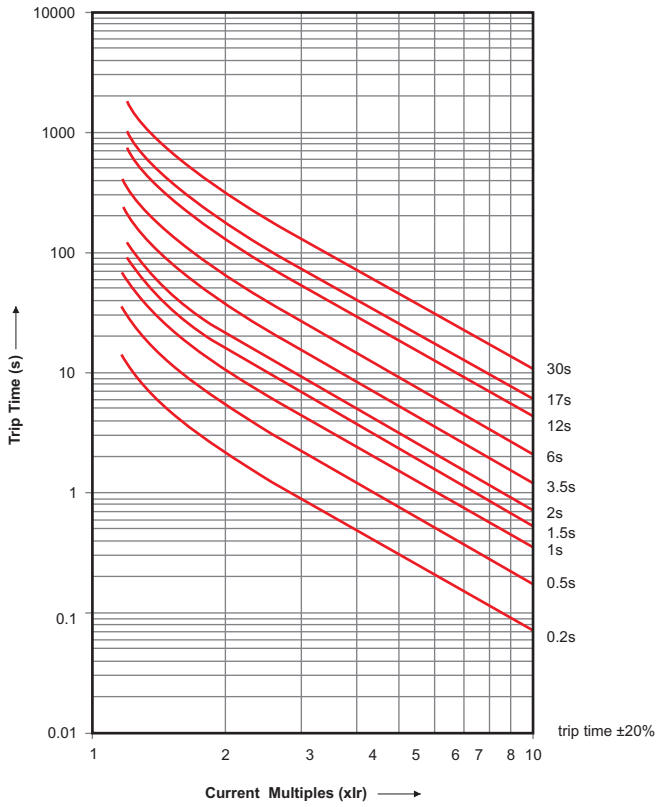


**Short-Circuit I<sup>2</sup>t ON**  
(SR18G/SR18Gi with display)

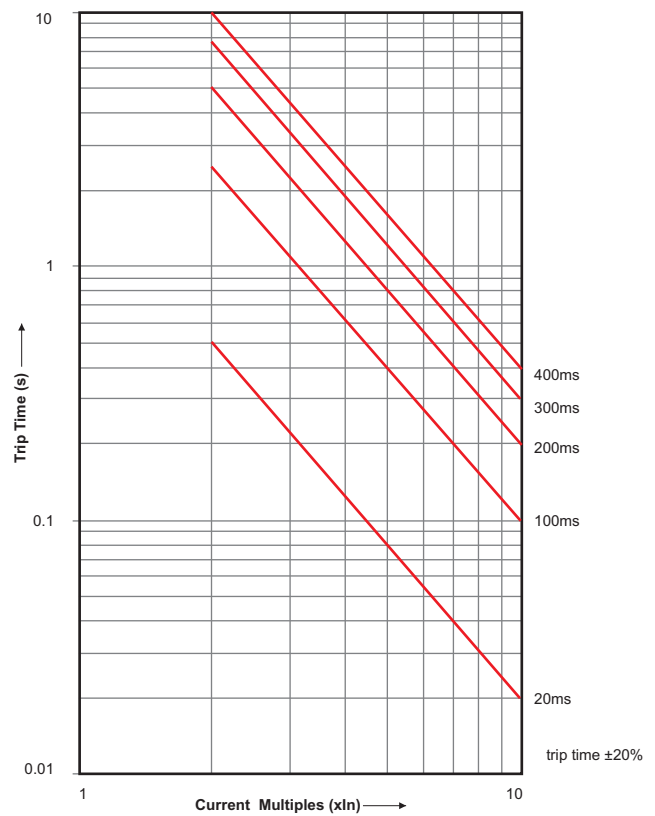


# PROTECTION CHARACTERISTIC

**Short-Circuit  $I^2t$  OFF**  
(SR18G/SR18Gi with display)

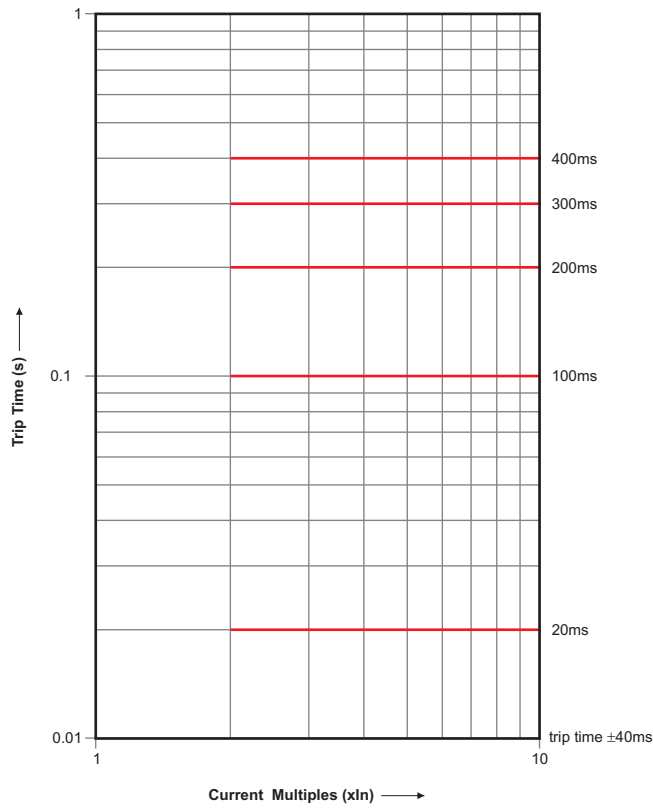


**Instantaneous**  
(SR18G/SR18Gi with display)

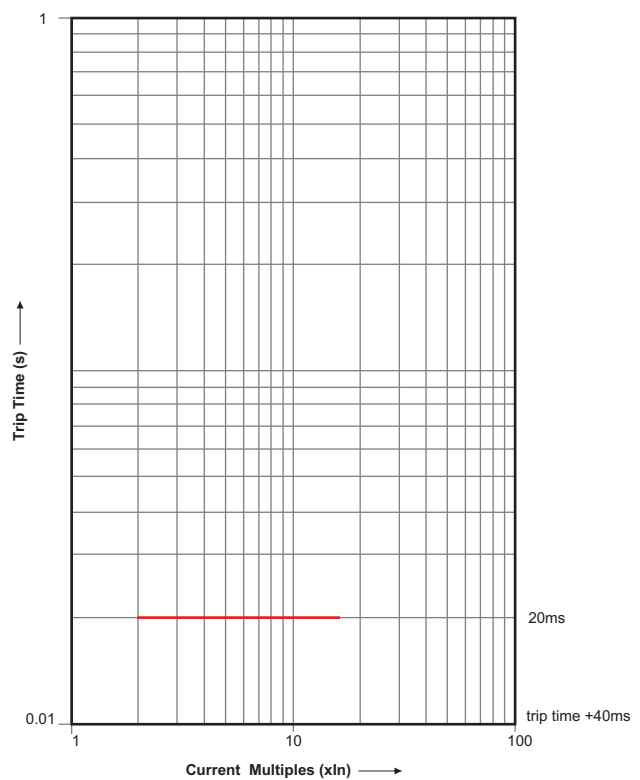


# PROTECTION CHARACTERISTIC

**Earth Fault  $I^2t$  ON**  
(SR18G/SR18Gi with display)

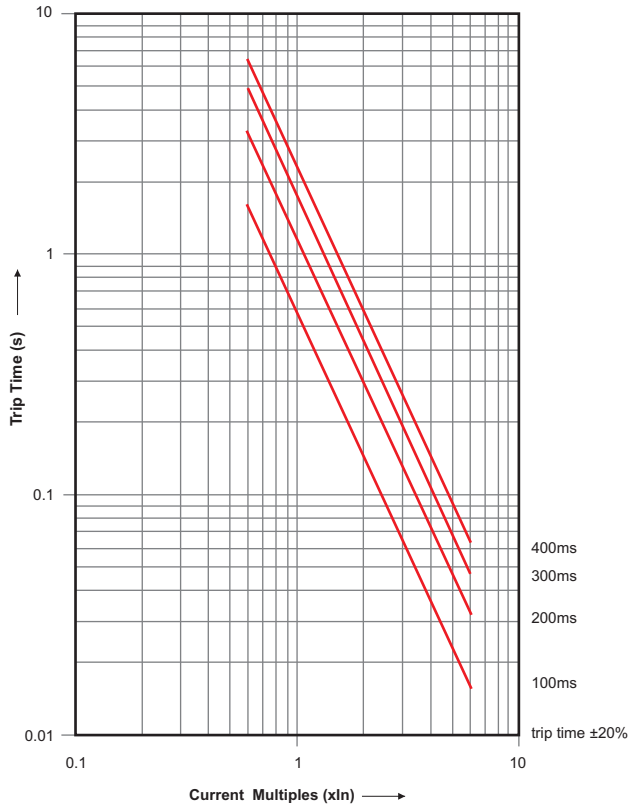


**Earth Fault  $I^2t$  OFF**  
(SR18G/SR18Gi with display)

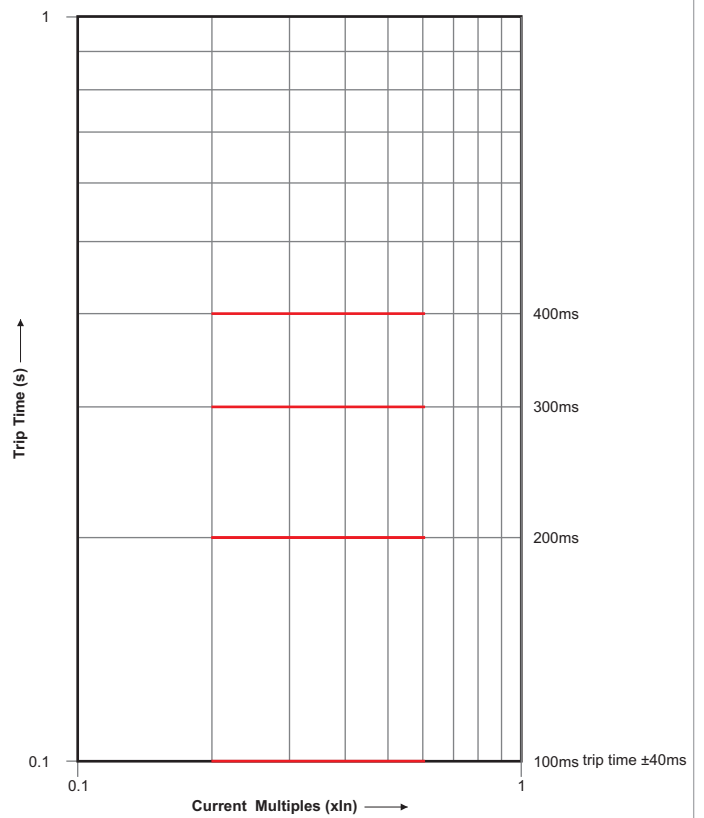


# PROTECTION CHARACTERISTIC

## Overload (SR21i)

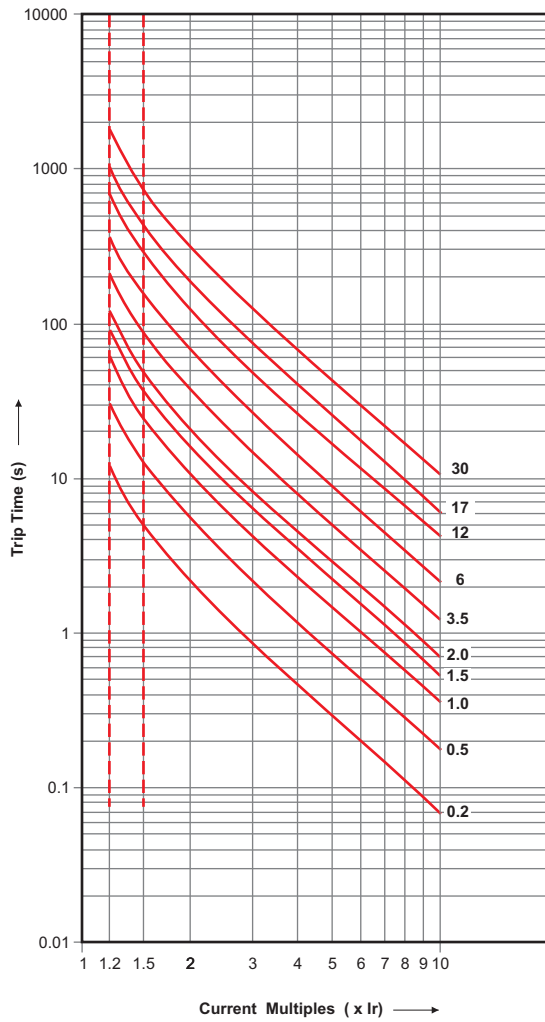


## Short-Circuit (SR21i)

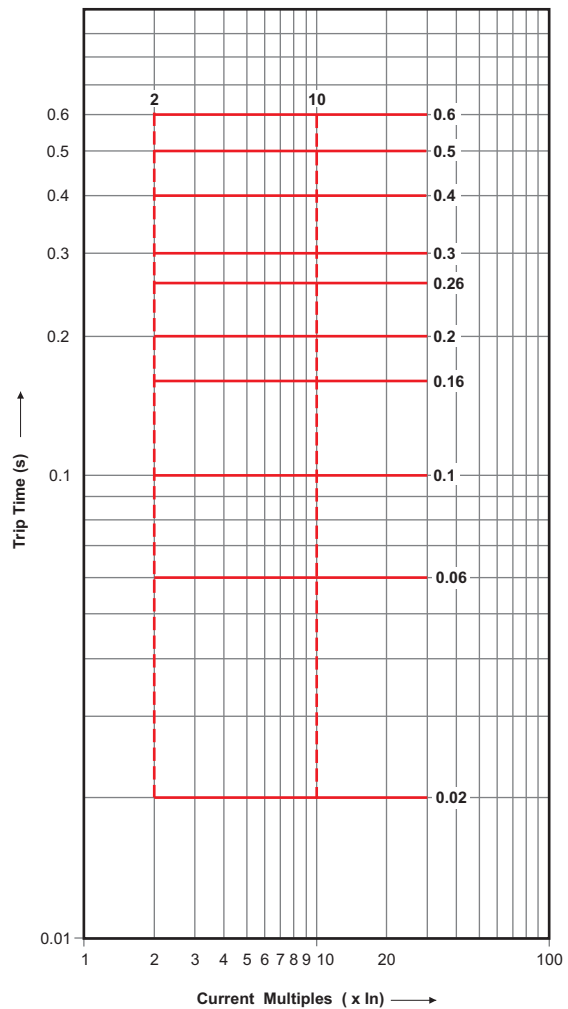


# PROTECTION CHARACTERISTIC

## Earth Fault (SR21i)

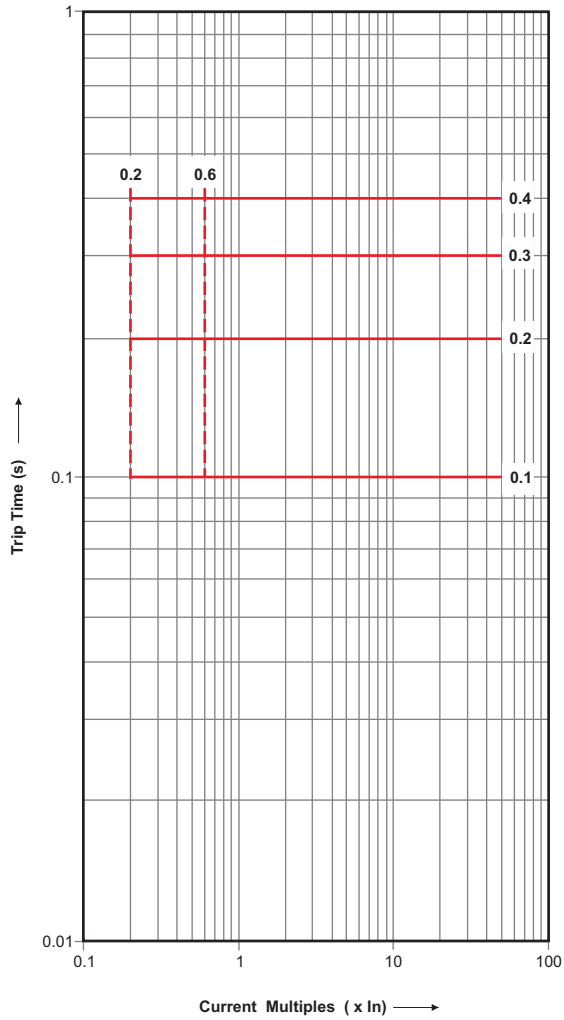


## Overload Curve (SR71)

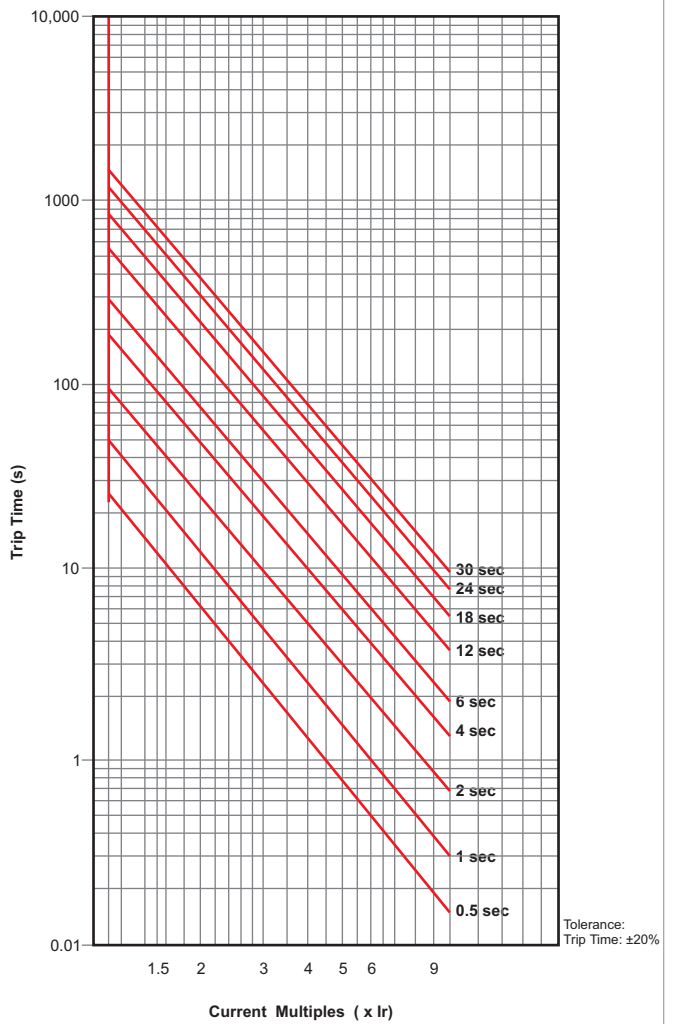


# PROTECTION CHARACTERISTIC

**Short-Circuit -  $I^2t$  ON  
(SR71)**

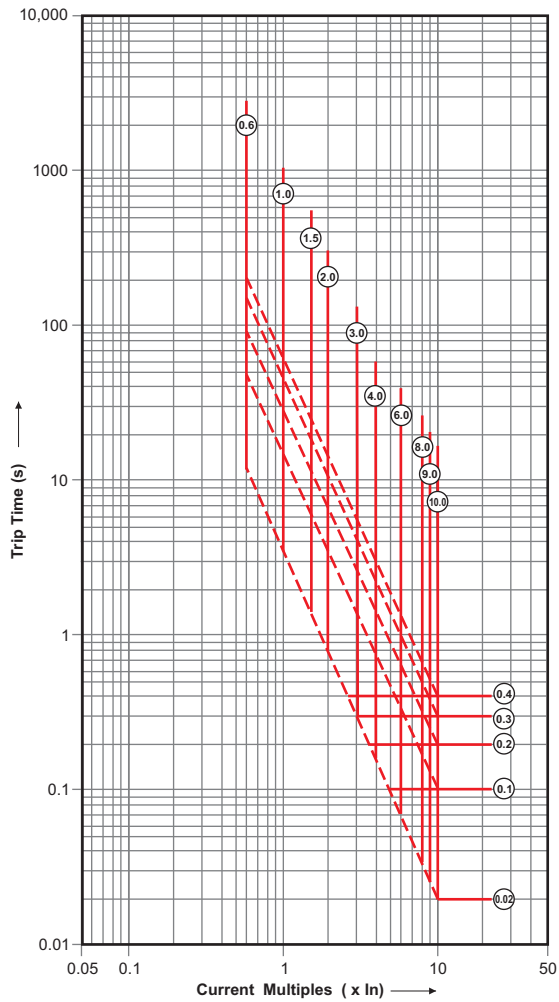


**Short-Circuit -  $I^2t$  OFF  
(SR71)**

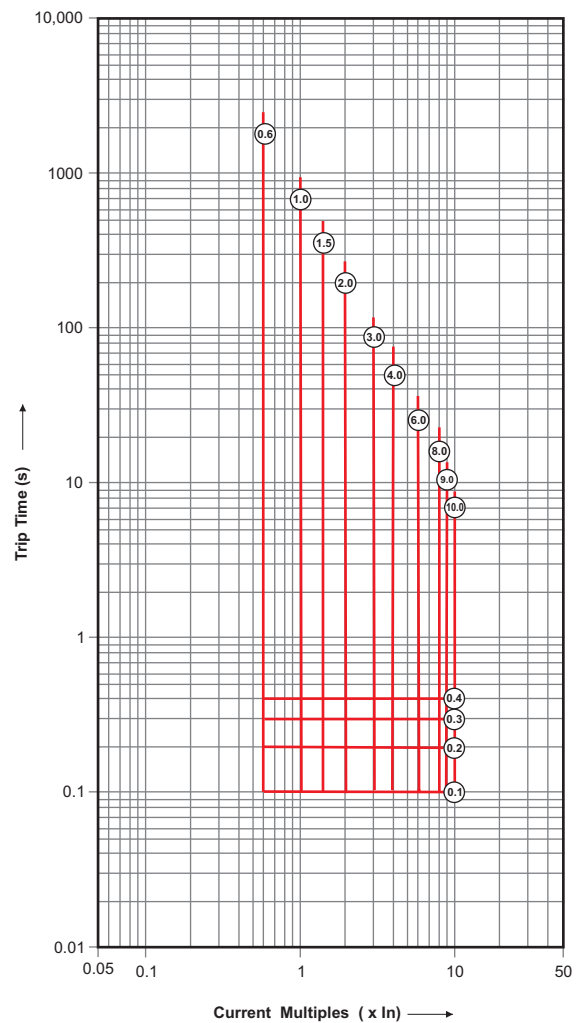


# PROTECTION CHARACTERISTIC

**Instantaneous  
(SR71)**

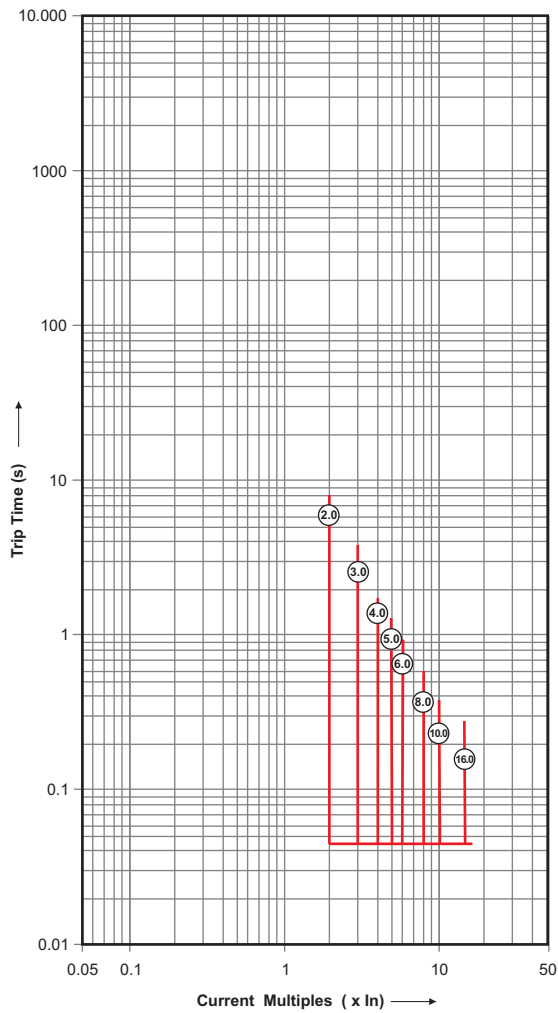


**Earth Fault -  $I^2t$  ON  
(SR71)**

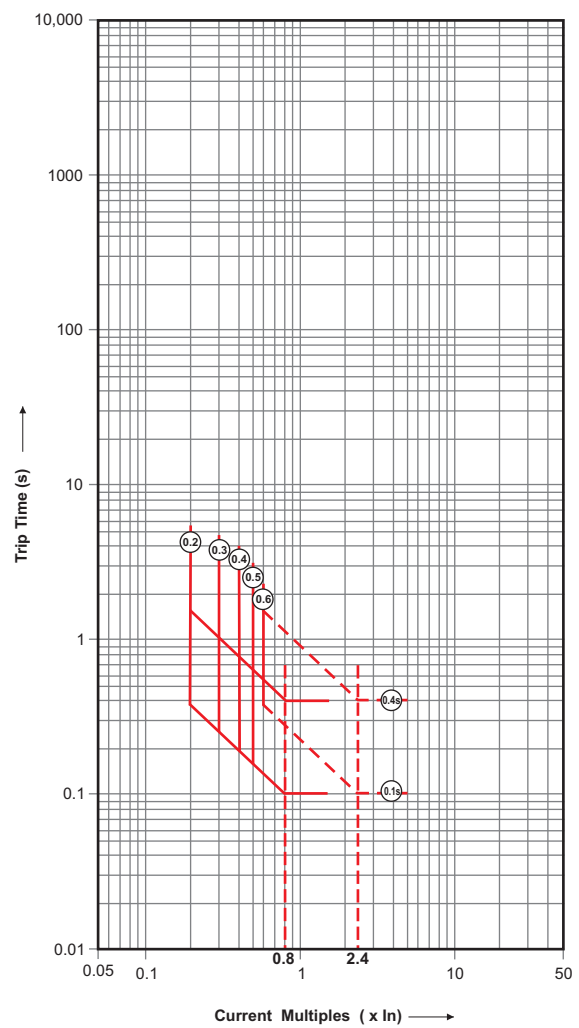


# PROTECTION CHARACTERISTIC

## Earth Fault - I<sup>2</sup>t OFF (SR71)

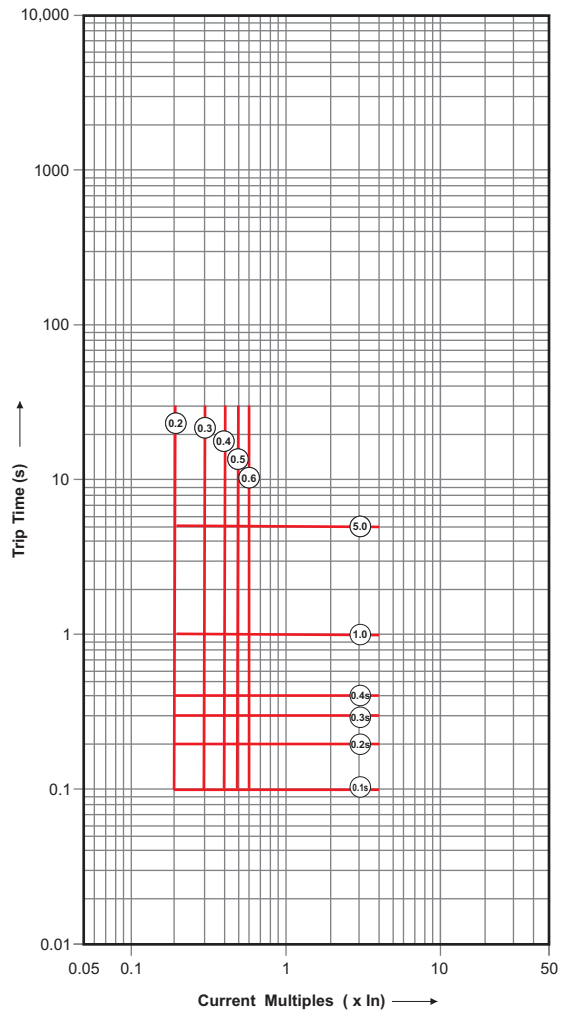

# WIRING DIAGRAM

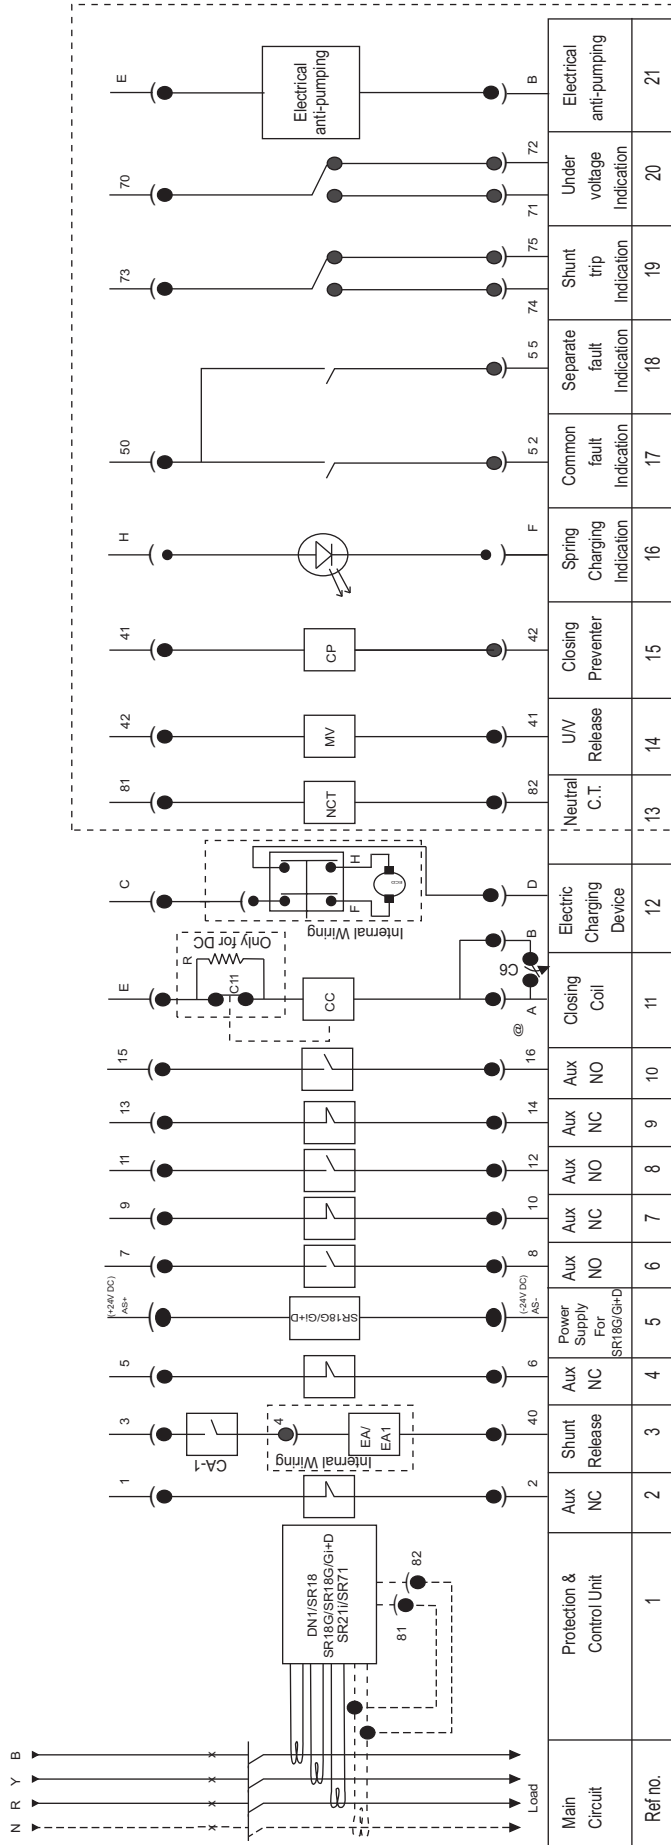

As per order/requirement

The above drawing is for EDO breakers.

1) For MDO/MF versions

Ref no. 3, 10, 11 are not applicable

E, B, C, D, A, 15 are applicable only in electrical breakers.

2) For EF versions

The ref. no. 12, 13, 14, 15, 16, 17, 18, 19, 20, 21 are provided as per customer requirement.

3) When using AN1 Annunciator Module with SR18G/18Gi (with display releases)

A) AS+ & AS- always appear after 5, 6 nos. of the SIC.

B) If 1,2,3,4,5,6 nos. of SICs are not there, AS+ & AS- will appear first.

C) SIC 13 and 14 Nos. are not offered in 3P EDO and 3P MDO standard breakers.

FCA Limit switch (Shown in breaker reset condition)

R Economy Resistor

C11 Limit switch operates when closing electromagnet is held on

C6 'Service' position microswitch for withdrawable circuit breakers (shown in 'test' position)




For SR18Gi+D & SR21i release (P&C unit)

SI, SO → i discrimination → Short circuit i/p & o/p

GI, GO → i discrimination → Earth fault i/p & o/p

G → Earth






# ACCESSORIES

Type	Data
<p><b>Lockable Trip Push Button (LTPB)</b></p> 	<p>Mounted in place of normal trip push button. With this, ACB can be locked in trip condition. For interlocking, LTPBs are offered in the following combinations:</p> <ul style="list-style-type: none"> <li>• 4 different types of keys i.e. AA, BB, CC and DD suitable for 2 I/C &amp; 1 B/C schemes</li> <li>• Combination of L, M, N, LM and MN locks, which are suitable for 3 I/C &amp; 2 B/C schemes</li> <li>• Combination of K, L, M, N, KL, LM and MN locks, which are suitable for 4 I/C &amp; 3 B/C schemes</li> <li>• Combination of J, K, L, M, N, JK, KL, LM and MN locks, which are suitable for 5 I/C &amp; 4 B/C schemes</li> </ul>
<p><b>View of the Cradle</b></p>  <p>Door Interlock    Racking Interlock    Locking in 'Isolated' Position</p>	<p><b>Locking in Isolated Position (LIP)</b> The facility of locking the ACB in Isolated position is available in Drawout ACBs. This is useful to achieve interlocking between Main &amp; Standby source. Similar lock is available as <b>LOCK IN ANY POSITION</b>.</p> <p><b>Door Interlock</b> This ensures:</p> <ul style="list-style-type: none"> <li>• Unless the panel door is closed, breaker cannot be racked in or out</li> <li>• Unless the breaker is in Isolated Position, it is not possible to open the panel door</li> </ul> <p><b>Racking Interlock</b> This ensures that breaker cannot be racked in/out unless the ACB is in tripped/open condition.</p>
<p><b>Mechanical Interlock</b></p> 	<p>It is possible to provide "Mechanical Interlock" between two breakers of the same or different ratings in vertical or horizontal configurations. Mechanical interlock is available for ACBs up to 4000A by flexible cables.</p>

# ACCESSORIES

Type	Data
 <p>A close-up photograph of a micro-switch labeled 'C1' with a red arrow pointing to it. The switch is mounted on a metal plate within a larger mechanical assembly, likely an Air Circuit Breaker (ACB).</p>	<p><b>Common indication of tripping due to overload, short-circuit and earth faults.</b></p> <ul style="list-style-type: none"> <li>• Provided by micro-switch C1 fitted inside the ACB</li> <li>• Available as an option in all releases</li> </ul>
 <p>A photograph of a micro-switch labeled 'C2' with a red arrow pointing to it. The switch is mounted on a printed circuit board (PCB) inside a release mechanism.</p>	<p><b>Separate indication of tripping due to overload, short-circuit and earth faults.</b></p> <ul style="list-style-type: none"> <li>• For release type DN1, this is provided by micro-switch C1 &amp; C2 (C2 fitted inside release)</li> </ul>
<p><b>AN1-Annunciator Module</b></p>  <p>A photograph of the AN1-Annunciator Module, a rectangular metal enclosure with a control panel. The panel features three LEDs labeled 'LONG TIME', 'SHORT TIME FAULT', and 'EARTH FAULT', along with a 'RESET' button and a 'CONTACT' terminal.</p>	<p><b>Remote indication of tripping due to overload, short-circuit and earth faults.</b></p> <ul style="list-style-type: none"> <li>• Can be used with releases type SR18/SR18G/SR21i/SR18G &amp; SR18Gi with display</li> <li>• Individual fault indication provided by three separate LEDs for             <ul style="list-style-type: none"> <li>- Long time faults</li> <li>- Short time fault/instantaneous fault</li> <li>- Earth fault</li> </ul> </li> <li>- One potential free contact rated 5A at 230V AC available for each type of fault</li> <li>• Flush mounting on panel (H-W-D=92mm x 46mm x 105mm)</li> <li>• Operating voltage: 240V AC</li> </ul>
 <p>A photograph of a micro-switch labeled 'C5' with a red arrow pointing to it. The switch is mounted on a metal plate, which is part of a shunt release or undervoltage release mechanism.</p>	<p><b>Indication for operation of shunt release or undervoltage release.</b></p> <ul style="list-style-type: none"> <li>• Provided by micro-switch C5 fitted on the shunt release or undervoltage release</li> </ul>


# ACCESSORIES

Type	Data	Technical Data													
<b>Shunt Release</b> 	<ul style="list-style-type: none"> <li>For remote tripping of the breaker</li> <li>Shunt release coil is short time rated and is disconnected from the circuit by an auxiliary contact when the ACB trips (Refer to wiring diagram)</li> <li>Low power consumption</li> <li>Two types available:                             <ul style="list-style-type: none"> <li>EA for DC application</li> <li>EA1 for AC application</li> </ul> </li> </ul>	<table border="1"> <thead> <tr> <th>Type of Release</th> <th>Nominal Voltage Use (V)</th> <th>Power consumption at pick-up</th> <th>Operation Limit</th> </tr> </thead> <tbody> <tr> <td>EA1</td> <td>110 AC 240 AC 415 AC</td> <td>800 VA 800 VA 800 VA</td> <td>10-130% V</td> </tr> <tr> <td>EA</td> <td>24V DC 48V DC 110 DC 220 DC</td> <td>32 W 125 W 45 W 30 W</td> <td>65-130% V</td> </tr> </tbody> </table> <p>Note : Other voltages available on request</p>	Type of Release	Nominal Voltage Use (V)	Power consumption at pick-up	Operation Limit	EA1	110 AC 240 AC 415 AC	800 VA 800 VA 800 VA	10-130% V	EA	24V DC 48V DC 110 DC 220 DC	32 W 125 W 45 W 30 W	65-130% V	
Type of Release	Nominal Voltage Use (V)	Power consumption at pick-up	Operation Limit												
EA1	110 AC 240 AC 415 AC	800 VA 800 VA 800 VA	10-130% V												
EA	24V DC 48V DC 110 DC 220 DC	32 W 125 W 45 W 30 W	65-130% V												
<b>Under Voltage Release</b> 	<ul style="list-style-type: none"> <li><b>Type MV</b> With no intentional time delay</li> </ul> <p><b>Notes:</b> When under voltage release is provided, the ACB can be closed only when supply is available to the under voltage release.</p>	<table border="1"> <thead> <tr> <th>Parameter</th> <th>Specification</th> </tr> </thead> <tbody> <tr> <td>Nominal voltage</td> <td>240V &amp; 415V 50Hz AC, 220V &amp; 415V 60Hz AC, &amp; 24V DC</td> </tr> <tr> <td>Pick up (V)</td> <td>80% U<sub>e</sub></td> </tr> <tr> <td>Drop off (V)</td> <td>35-65% U<sub>e</sub></td> </tr> <tr> <td>VA Consumption</td> <td>Pick up - 23 VA Hold on - 8.5 VA</td> </tr> <tr> <td>Watt loss</td> <td>6 W</td> </tr> </tbody> </table>	Parameter	Specification	Nominal voltage	240V & 415V 50Hz AC, 220V & 415V 60Hz AC, & 24V DC	Pick up (V)	80% U <sub>e</sub>	Drop off (V)	35-65% U <sub>e</sub>	VA Consumption	Pick up - 23 VA Hold on - 8.5 VA	Watt loss	6 W	
Parameter	Specification														
Nominal voltage	240V & 415V 50Hz AC, 220V & 415V 60Hz AC, & 24V DC														
Pick up (V)	80% U <sub>e</sub>														
Drop off (V)	35-65% U <sub>e</sub>														
VA Consumption	Pick up - 23 VA Hold on - 8.5 VA														
Watt loss	6 W														
<b>Closing Release</b> 	<p>Closing release remotely closes the circuit breaker if the mechanism spring is already charged.</p>	<table border="1"> <thead> <tr> <th rowspan="2">Rated voltage (Us)</th> <th colspan="2">Power consumption</th> <th rowspan="2">Range of operation</th> </tr> <tr> <th>Pick-up</th> <th>Hold-on</th> </tr> </thead> <tbody> <tr> <td>110V, 50Hz 240V, 50Hz 220V, 60Hz</td> <td>320 VA</td> <td>50 VA</td> <td rowspan="2">85-110% U<sub>s</sub></td> </tr> <tr> <td>110V DC, 220V DC 24V, 30V, 48V DC</td> <td>300 W</td> <td>50 W</td> </tr> </tbody> </table>	Rated voltage (Us)	Power consumption		Range of operation	Pick-up	Hold-on	110V, 50Hz 240V, 50Hz 220V, 60Hz	320 VA	50 VA	85-110% U <sub>s</sub>	110V DC, 220V DC 24V, 30V, 48V DC	300 W	50 W
Rated voltage (Us)	Power consumption			Range of operation											
	Pick-up	Hold-on													
110V, 50Hz 240V, 50Hz 220V, 60Hz	320 VA	50 VA	85-110% U <sub>s</sub>												
110V DC, 220V DC 24V, 30V, 48V DC	300 W	50 W													
<b>Spring Charging Motor</b> 	<p>Electrical charging device automatically charges the mechanism spring of the circuit-breaker. After circuit-breaker closing, the geared motor immediately recharges the closing spring. Thus instantaneous reclosing of the circuit-breaker is possible following opening operation.</p>	<table border="1"> <thead> <tr> <th>Rated operational voltage (U<sub>e</sub>)</th> <th>Power consumption</th> <th>Range of operation</th> </tr> </thead> <tbody> <tr> <td>240V AC</td> <td>320 VA</td> <td rowspan="2">85-110% U<sub>e</sub></td> </tr> <tr> <td>110V DC 220V DC</td> <td>154 W</td> </tr> </tbody> </table>	Rated operational voltage (U <sub>e</sub> )	Power consumption	Range of operation	240V AC	320 VA	85-110% U <sub>e</sub>	110V DC 220V DC	154 W					
Rated operational voltage (U <sub>e</sub> )	Power consumption	Range of operation													
240V AC	320 VA	85-110% U <sub>e</sub>													
110V DC 220V DC	154 W														
<b>Auxiliary Contacts</b> 	<p>Two combinations available:</p> <ul style="list-style-type: none"> <li>2 NO + 2 NC</li> <li>6 NO + 6 NC</li> </ul>	<table border="1"> <thead> <tr> <th>Electrical circuit</th> <th>Voltage (V)</th> <th>Rated current (A)</th> </tr> </thead> <tbody> <tr> <td>Resistive</td> <td>24 to 415 AC 250V DC</td> <td>16 1.2</td> </tr> <tr> <td>Non-resistive</td> <td>24 to 415 AC 250V DC</td> <td>16 1.0 #</td> </tr> </tbody> </table> <p># L/R = 15 ms with 2NO or 2NC contacts in series</p>	Electrical circuit	Voltage (V)	Rated current (A)	Resistive	24 to 415 AC 250V DC	16 1.2	Non-resistive	24 to 415 AC 250V DC	16 1.0 #				
Electrical circuit	Voltage (V)	Rated current (A)													
Resistive	24 to 415 AC 250V DC	16 1.2													
Non-resistive	24 to 415 AC 250V DC	16 1.0 #													


# OVERALL DIMENSIONS

## Fixed Breakers

For 800A to 2500A 3P/4P C/H & 400A to 1600A 3P/4P S1

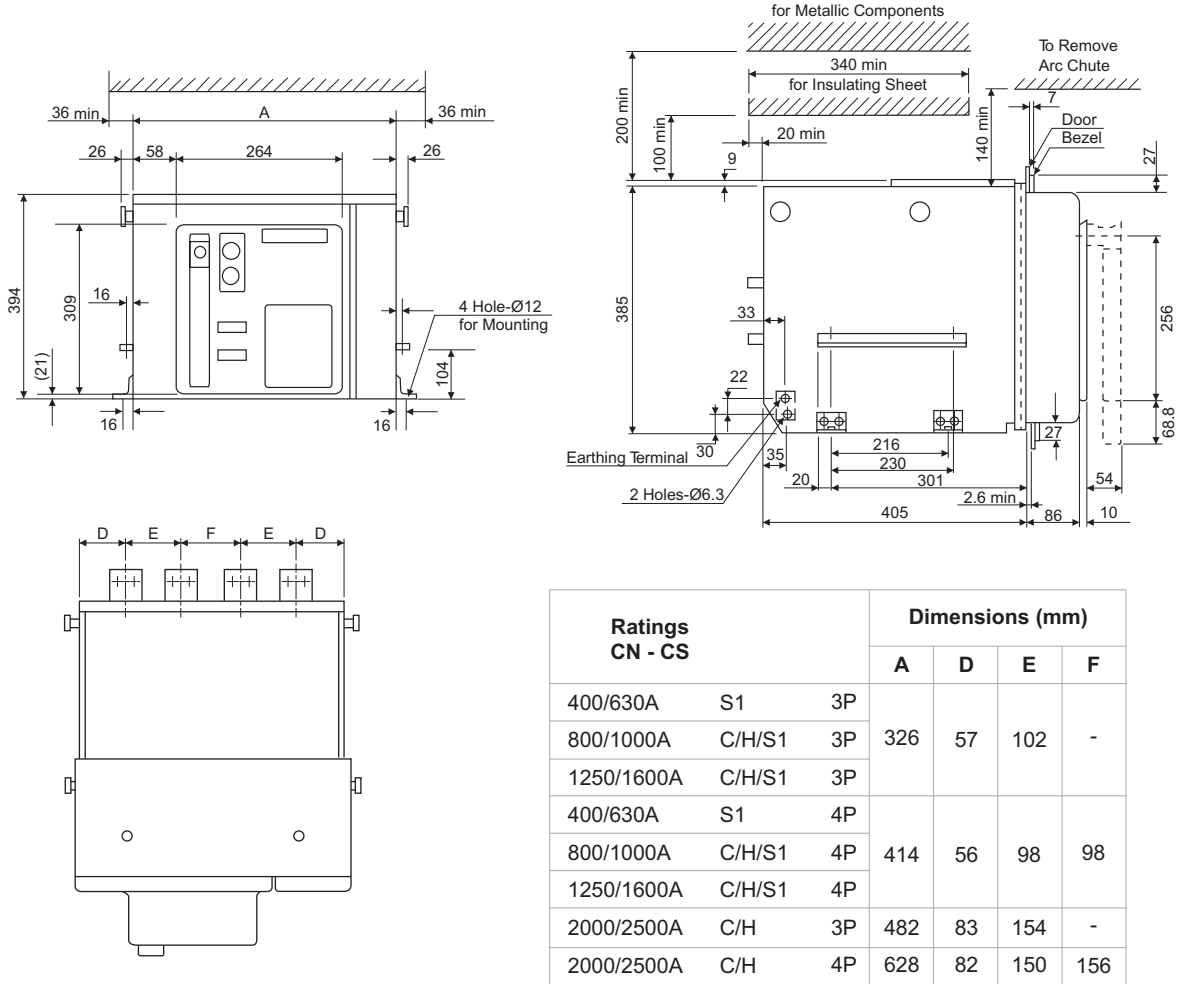


For CN-CS...E 400A-2000A 3P

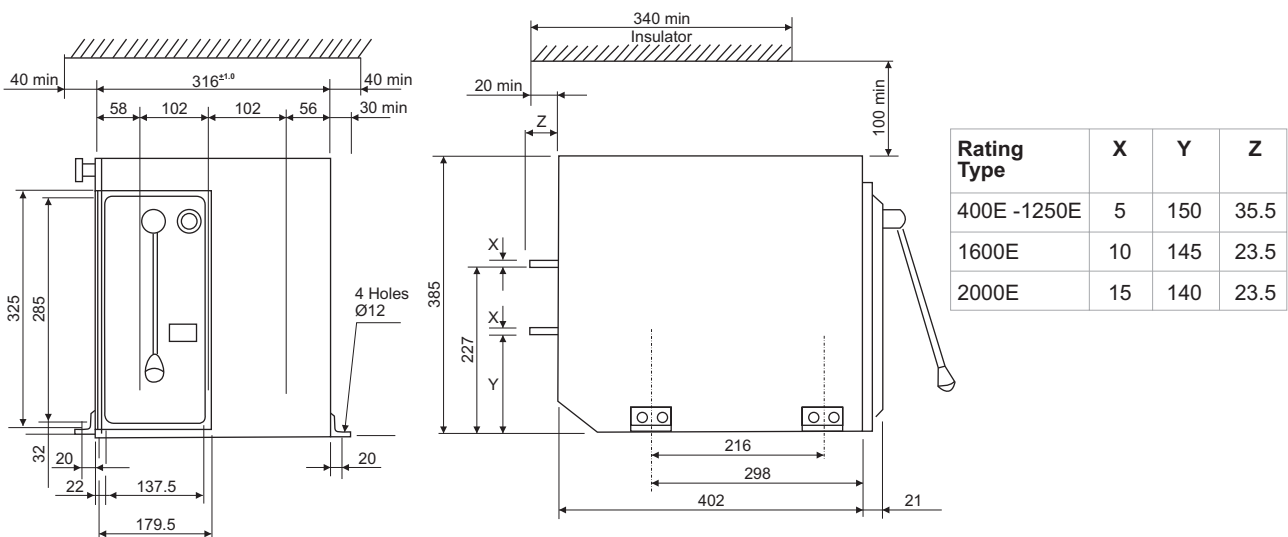

# OVERALL DIMENSIONS

## Fixed Breakers


### Terminal

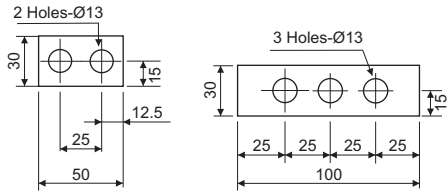

400 to 2000E, 800/1000/  
1250/1600C/H &  
400/630/800/1000  
/1250/1600S1

2000/2500C/H

### Terminal Connections

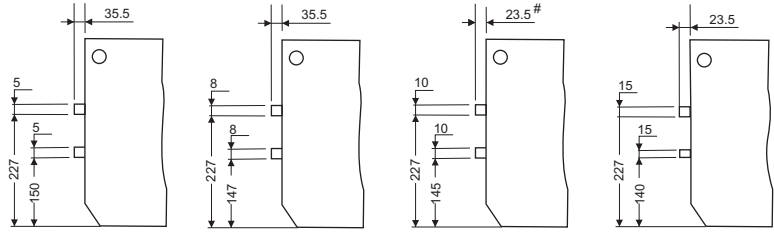


Terminal for  
400/630 S1

Terminal for  
800/1000 S1

Terminal for 800 C,  
1000 C & 1250 S1  
# 35.5 : For 1250S1



Terminal for 1600 S1  
800/1000 H, 1250/  
1600 C/H,  
2000/2500 C/H

### Bezel Fixing Plan for all Fixed Breakers


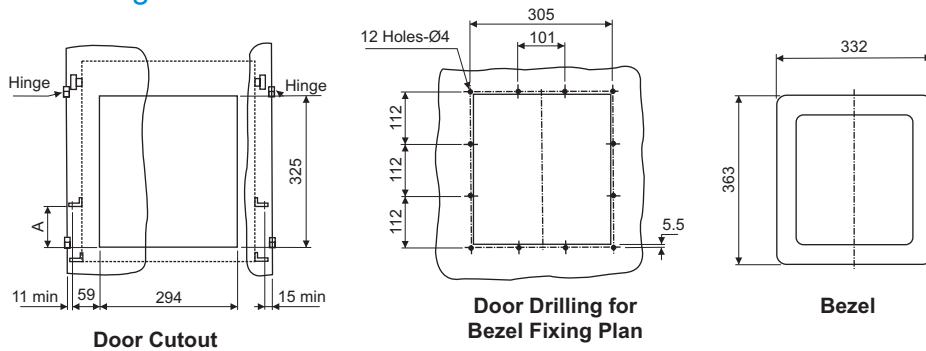


Note:  
A = 89 for 4000C/3200D  
A = 91 for other fixed ACBs

### For 3200D/4000C 3P/4P

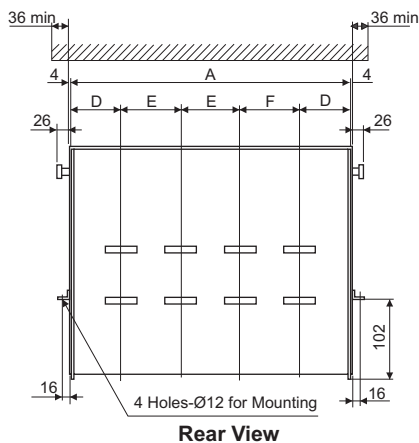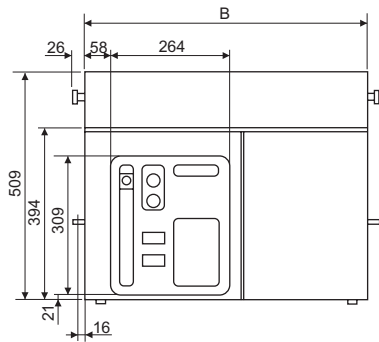


Rear View

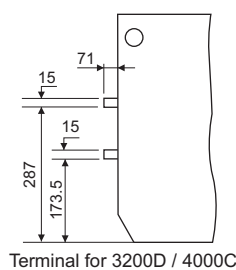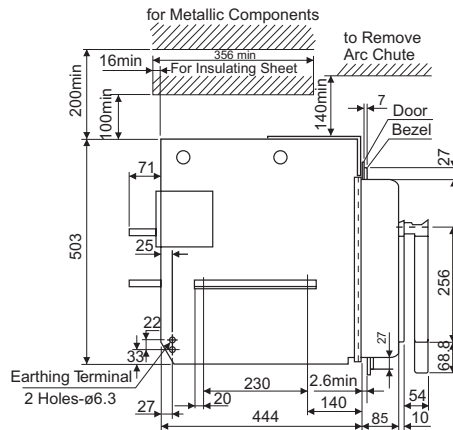

Terminal for 3200D / 4000C

### Terminal Connections

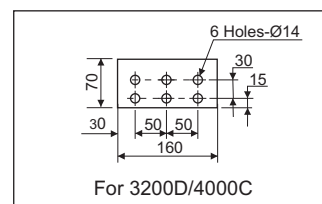


For 3200D/4000C

Rating CN-CS	Dimensions (mm)				
	A	B	D	E	F
3200D/4000A C 3P	628	636	112	202	-
3200D/4000A C 4P	830	838	112	202	202

# OVERALL DIMENSIONS

## Drawout Breakers

For 800A to 2500A C/H, 3200A H2/H1, 4000A H2/H, 400A to 3200A S1 3P/4P

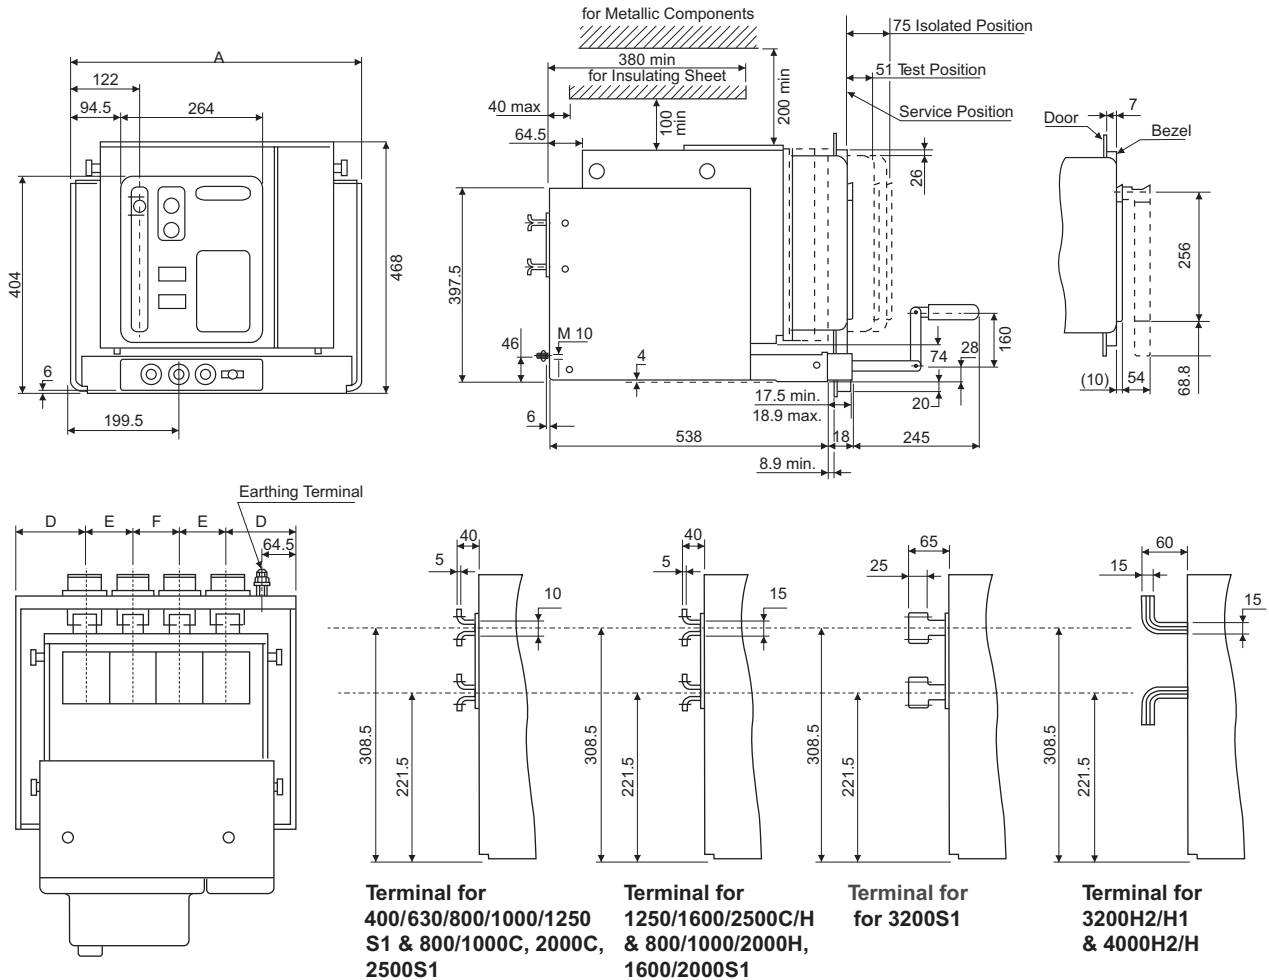


Ratings CN - CS			Dimensions (mm)			
			A	D	E	F
400/630/800/1000A	C/H/S1	3P	399	97.5	102	-
2000A	S1	3P				
1250/1600A	C/H/S1	3P	487	96.5	98	98
400/630/800/1000A	C/H/S1	4P				
2000A	S1	4P	555	123.5	154	-
1250/1600A	C/H/S1	4P				
2000/2500A	C/H	3P	701	122.5	150	156
2500/3200A	S1	3P				
2000/2500A	C/H	4P	701	148.5	202	-
2500/3200A	S1	4P				
3200A	H2/H1	3P	909	151.5	202	202
4000A	H2/H	3P				
3200A	H2/H1	4P	909	151.5	202	202
4000A	H2/H	4P				


# OVERALL DIMENSIONS

## Drawout Breakers


### Flat Terminal Connections

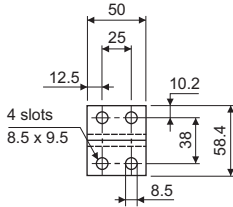


800 - 1000C & 400 - 1250S1

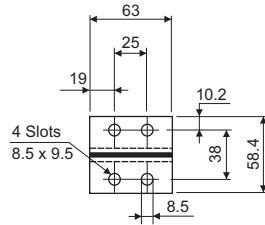


800 - 1000H, 1250/1600C/H & 1600 - 2000S1

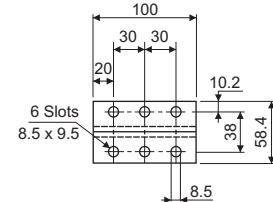


2000C

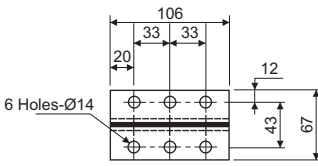


2500C/H & 2000H

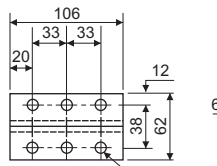

2500S1

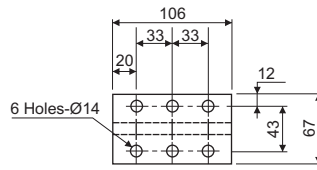


3200S1

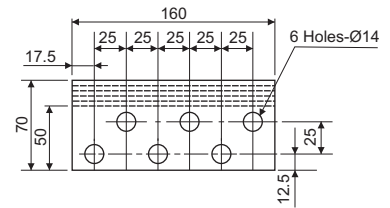


3200H2/H1 & 4000H2/H


### For 3200D/4000/5000/6300C 3P/4P

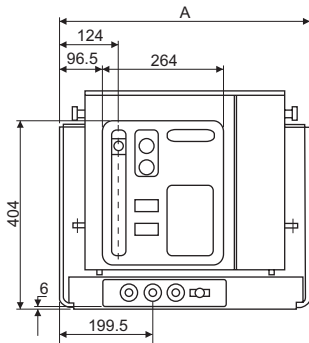


FRONT VIEW

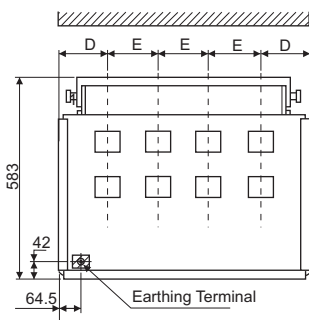


REAR VIEW

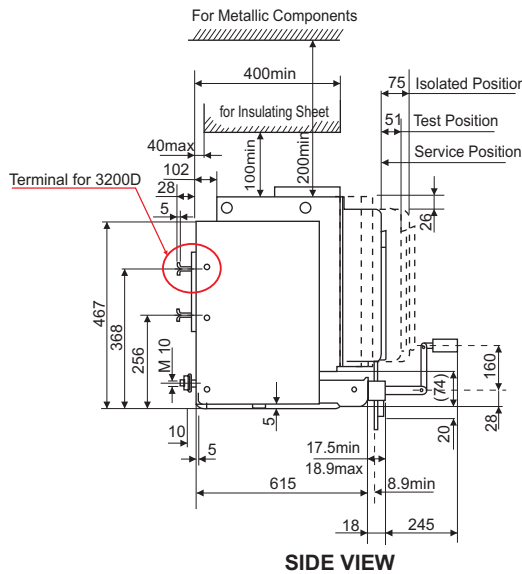


SIDE VIEW

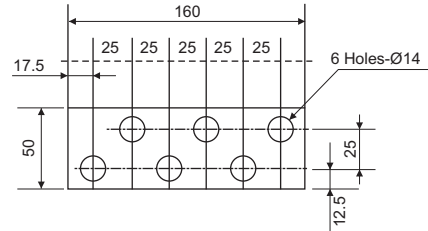


Terminal Connections  
4000C

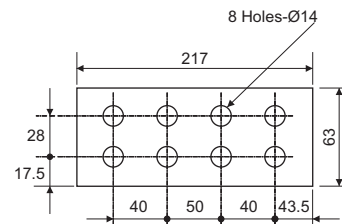

Terminal Connections  
5000C/6300C

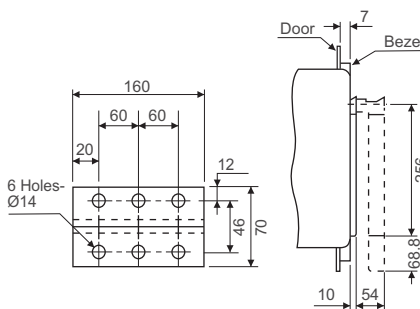

Terminal Connections  
3200D

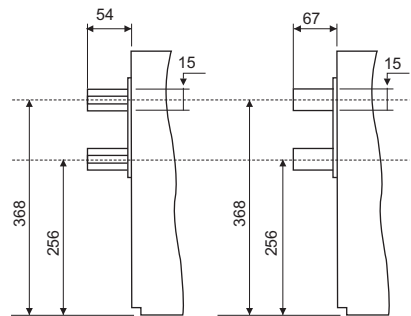

Terminal for  
4000A C

Terminal for  
5000/6300A C


Ratings	Dimensions (mm)		
	A	D	E
3200D/4000C 3P	711	155.5	200
3200D/4000C 4P	913	156.5	200
5000A/6300A 3P	913	187.5	269
5000A/6300A 4P	1182	187.5	269

# OVERALL DIMENSIONS

## Mounting Details


### For Horizontal Mounting of all Draw-out Breakers

For 400A to 3200A C/H/ S1 3P/4P 3200 H2/H1, 4000 H2/H 3P/4P

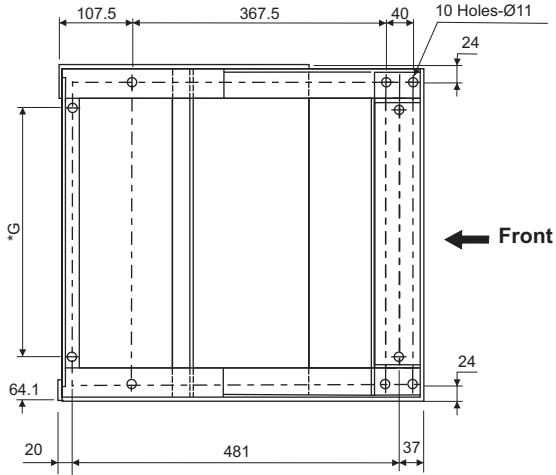


Ratings	Type	G (mm)
800A - 1600A 3P	C/H	280.3
400A - 2000A 3P	S1	280.3
800A - 1600A 4P	C/H	368.3
400A - 2000A 4P	S1	368.3
2000/2500A 3P	C/H	436.3
2000/2500A 4P	C/H	582.3
2500/3200A 3P	S1	436.3
2500/3200A 4P	S1	582.3
3200A 3P	H2/H1	582.3
3200A 4P	H2/H1	790.3
4000A 3P	H2/H	582.3
4000A 4P	H2/H	790.3

For 3200D/4000C/5000C/6300C 3P/4P

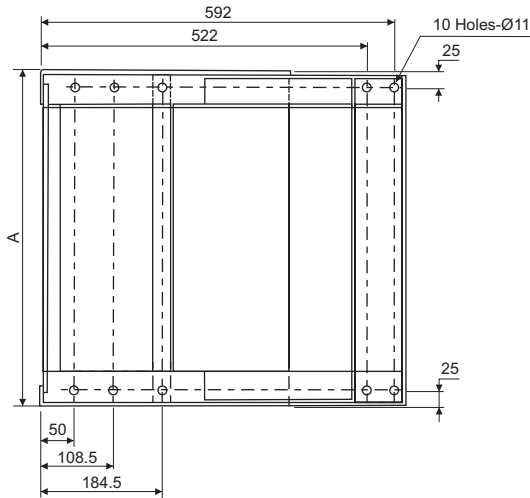

Ratings CN-CS	Dimensions
	A
3200D/4000C	711
3200D/4000C	913
5000C/6300C	913
5000C/6300C	1182

### Bezel Fixing Plan for all Draw-out Breakers

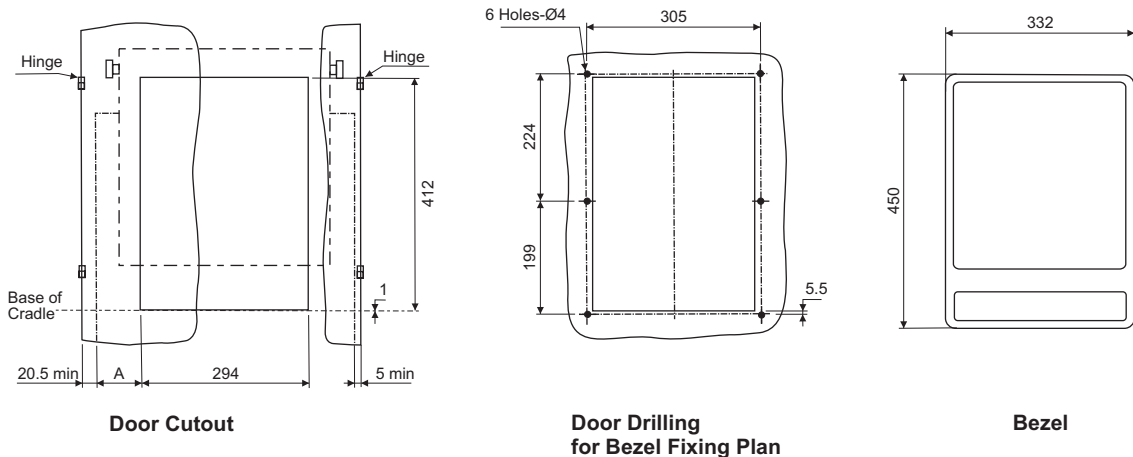


Note: For 3200A D 3P/4P, 4000A C 3P/4P, 5000C/6300C 3P/4P ACB, A=81.5  
For other Drawout Breakers A=79.5


# OVERALL DIMENSIONS

## Terminals

### Horizontal Terminals

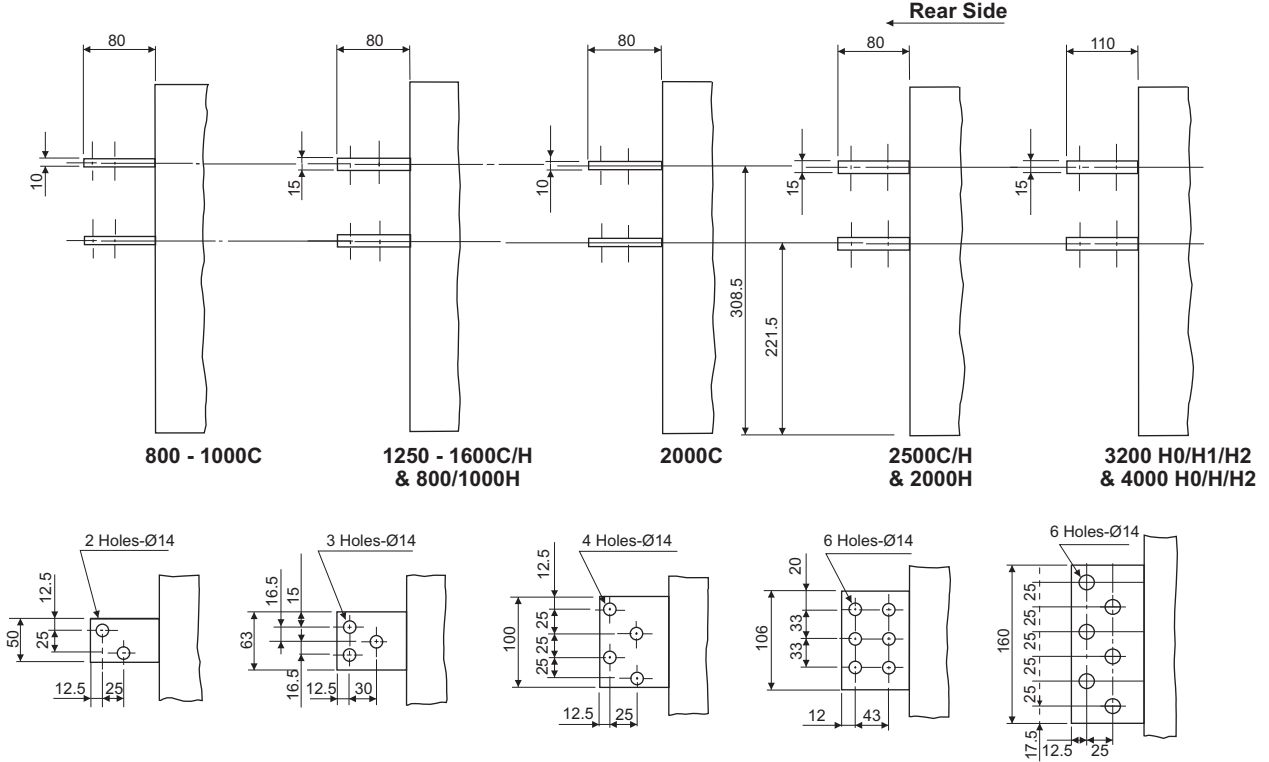

### Vertical Terminals

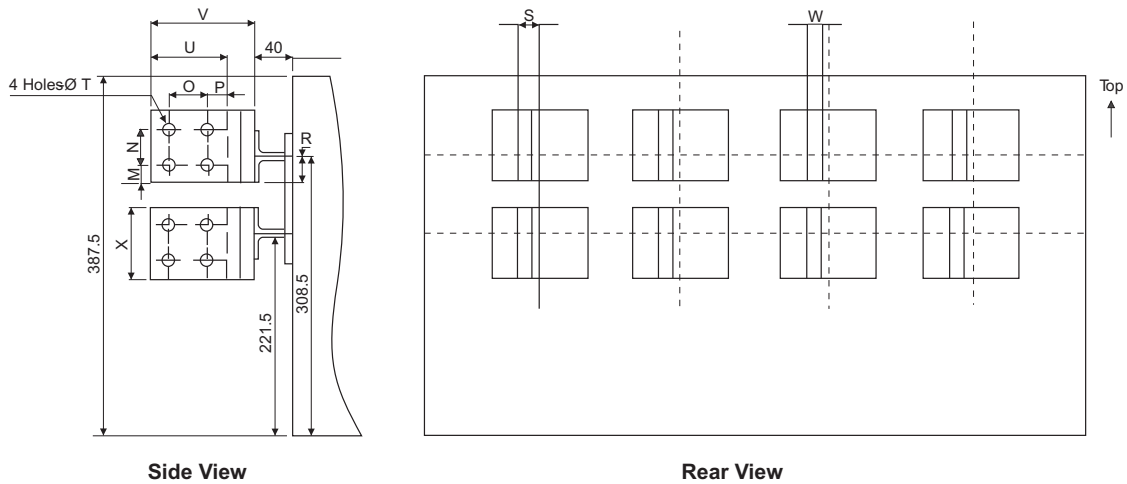


Ratings	M	N	P	Q	R	S	T	U	V	W	X
400-1250 S1 & 800-1000 C	10.2	38	20	25	29.2	5	9	65	95	10	58.4
1600-2000 S1 & 1250-1600 C/H	20	40	20	25	29.2	5	9	65	95	10	80
800-1000 H											
2000 C	20	40	20	40	29.2	22.5	14	80	110	15	80
2500 S1/ C/H	20	40	20	40	33.5	7.5	14	80	110	15	80
2000 H											
3200 S1	30	60	20	40	33.5	7.5	14	80	110	15	120

# OVERALL DIMENSIONS

## Terminals

### Vertical Terminals 3200 H2/H1, 4000 H2/H

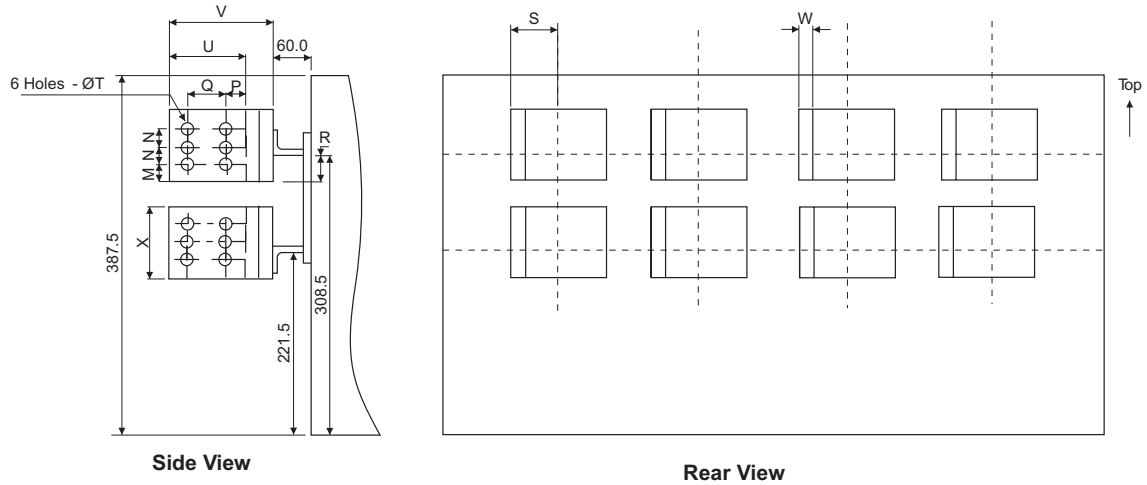

The dimensions for 3200 H2/H1 and 4000 H2/H are as under:

Ratings	M	N	P	Q	R	S	T	U	V	W	X
3200 H2/H1, 4000A H2/H	30	50	45	40	22.5	95	14	105	135	15	160

# Get the Switchgear Training Edge!

Aimed at maximizing productivity, conserving energy, minimizing costs and enhancing safety, our Electrical & Automation training programmes have benefitted over 1.35 Lakh professionals in the last 28 years. These training programmes are highly beneficial as they provide right exposure and impart knowledge on selection, installation, maintenance and testing of Electrical & Automation Products.

## So gain the advantage and go the extra mile with:

- 22 courses on contemporary topics
- Courses applicable to all switchgear brands
- Training Centers in Pune, Lucknow, Coonoor, Vadodara, Delhi & Kolkata
- Blend of theory and practical experience

## The typical training programmes cover:

- Low Voltage & Medium Voltage Switchgear
- Switchboard Electrical Design
- AC Drives & Building Management Solutions
- Protective Relays, Earthing, Reactive Power Management & Harmonics
- Energy Conservation & Management

Please contact any of the training centres for participation and detailed training programme schedule.



### Pune

Larsen & Toubro Limited  
Switchgear Training Centre,  
T-156/157, MIDC  
Bhosari, Pune - 411 026  
Tel: 020 2712 0037 / 2712 0653  
Fax: 020 2712 2933  
E-mail: stc-pune@Lntebg.com



### Lucknow

Larsen & Toubro Limited  
Switchgear Training Centre,  
C - 6 & 7, UPSIDC  
P. O. Sarojinagar, Lucknow - 226 008  
Tel: 0522 247 6015 / 97944 54455  
Fax: 0522 247 6015  
E-mail: stc-lucknow@Lntebg.com



### Coonoor

Larsen & Toubro Limited  
Switchgear Training Centre,  
Ooty-Coonoor Main Road  
Yellanahalli P.O., The Nilgiris - 643 243  
Tel. : 0423 251 7107  
Fax : 0423 251 7158  
E-mail: stc-coonoor@Lntebg.com



### Vadodara

Larsen & Toubro Limited  
Switchgear Training Centre  
Behind L&T Knowledge City,  
Near Village Ankhol,  
Vadodara - 390019  
Tel: 0265 2457805  
E-mail: stc-vadodara@Lntebg.com



### Delhi

Larsen & Toubro Ltd  
Switchgear Training Centre  
32, Shivaji Marg,  
Near Motinagar Metro Station,  
New Delhi - 110015  
Tel: 011 41419515 / 41419695 / 41419500  
Fax: 011 41419600  
E-mail: stc-delhi@Lntebg.com



### Kolkata

Larsen & Toubro Limited  
Switchgear Training Centre  
4th Floor, 3B, Shakespeare Sarani,  
Kolkata-700071  
Tel: 033 44002151  
E-mail: stc-kolkata@Lntebg.com

## Electrical Standard Products (ESP) Offices:

### HEAD OFFICE

L&T Business Park,  
Tower 'B' / 3rd Floor  
Saki Vihar Road, Powai  
**Mumbai 400 072**  
Tel: 022-67053229  
Fax: 022-67051112  
e-mail: cic@LNTEBG.com

### BRANCH OFFICES

501, Sakar Complex I  
Opp. Gandhigram Rly. Station  
Ashram Road  
**Ahmedabad 380 009**  
Tel: 079-66304006-11  
Fax: 079-66304025  
e-mail: esp-ahm@LNTEBG.com

38, Cubbon Road, P. O. Box 5098  
**Bangalore 560 001**  
Tel: 080-25020100 / 25020324  
Fax: 080-25580525  
e-mail: esp-blr@LNTEBG.com

131/1, Zone II  
Maharana Pratap Nagar  
**Bhopal 462 011**  
Tel: 0755-3080511 / 05 / 08 / 13 / 17 / 19  
Fax: 0755-3080502  
e-mail: esp-bho@LNTEBG.com

Plot No. 559, Annapurna Complex  
Lewis Road  
**Bhubaneswar 751 014**  
Tel: 0674-6451342, 2436690, 2436696  
Fax: 0674-2537309  
e-mail: esp-bsr@LNTEBG.com

Aspire Towers, 4th Floor  
Plot No. 55, Phase-I  
Industrial & Business Park  
**Chandigarh-160 002**  
Tel: 0172-4646840 / 41 / 42 / 46 / 53  
Fax: 0172-4646802  
Email: esp-chd@Lntebg.com

L&T Construction Campus  
TC-1 Building, II Floor  
Mount-Poonamallee Road  
Manapakkam  
**Chennai 600 089**  
Tel: 044-2270 6800  
Fax: 044-22706940  
e-mail: esp-maa1@LNTEBG.com

67, Appuswamy Road  
Post Bag 7156  
Opp. Nirmala College  
**Coimbatore 641 045**  
Tel: 0422-2588120 / 1 / 5  
Fax: 0422-2588148  
e-mail: esp-cbe@LNTEBG.com

Khairasol, Degaul Avenue  
**Durgapur 713 212**  
Tel: 2559848, 2559849, 2559844  
Fax: 0343-2553614  
e-mail: esp-dgp@LNTEBG.com

5, Milanpur Road, Bamuni Maidan  
**Guwahati 781 021**  
Tel: +91 8876554410 / 8876554417  
Fax: 361-2551308  
e-mail: esp-ghy@LNTEBG.com

II Floor, Vasantha Chambers  
5-10-173, Fateh Maidan Road  
**Hyderabad 500 004**  
Tel: 040-67015052  
Fax: 040-23296468  
e-mail: esp-hyd@LNTEBG.com

Monarch Building, 1st Floor  
D-236 & 237, Amrapali Marg  
Vaishali Nagar  
**Jaipur 302 021**  
Tel: 0141-4385914 to 18  
Fax: 0141-4385925  
e-mail: esp-jai@LNTEBG.com

Akashdeep Plaza, 2nd Floor  
P. O. Golmuri  
**Jamshedpur 831 003**  
Jharkhand  
Tel: 0657-2312205 / 3  
Fax: 0657-2341250  
e-mail: esp-jam@LNTEBG.com

Skybright Bldg; M. G. Road  
Ravipuram Junction, Emakulam  
**Kochi 682 016**  
Tel: 0484-4409420 / 4 / 5 / 7  
Fax: 0484-4409426  
e-mail: esp-cok@LNTEBG.com

3-B, Shakespeare Sarani  
**Kolkata 700 071**  
Tel: 033-44002572 / 3 / 4  
Fax: 033-22821025 / 7587  
e-mail: esp-ccu@LNTEBG.com

A28, Indira Nagar, Faizabad Road  
**Lucknow 226 016**  
Tel: 0522-4929905 / 04  
Fax: 0522-2311671  
e-mail: esp-Lko@LNTEBG.com

No: 73, Karpaga Nagar, 8th Street  
K. Pudur  
**Madurai 625 007**  
Tel: 0452-2537404, 2521068  
Fax: 0452-2537552  
e-mail: esp-mdu@LNTEBG.com

L&T Business Park,  
Tower 'B' / 5th Floor  
Saki Vihar Road, Powai  
**Mumbai 400 072**  
Tel: 022-67052874 / 2737 / 1156  
Fax: 022-67051112  
e-mail: esp-bom@LNTEBG.com

12, Shivaji Nagar  
North Ambajhari Road  
**Nagpur 440 010**  
Tel: 0712-2260012 / 6606421  
Fax: 2260030 / 6606434  
e-mail: esp-nag@LNTEBG.com

32, Shivaji Marg  
P. O. Box 6223  
**New Delhi 110 015**  
Tel: 011-41419514 / 5 / 6  
Fax: 011-41419600  
e-mail: esp-del@LNTEBG.com

L&T House  
P. O. Box 119  
191/1, Dhole Patil Road  
**Pune 411 001**  
Tel: 020-66033395 / 66033279  
Fax: 020-26164048 / 26164910  
e-mail: esp-pnq@LNTEBG.com

Crystal Tower,  
4th Floor, G. E. Road  
Telibandha  
**Raipur - 492 006**  
Tel: 0771-4283214  
e-mail: esp-raipur@LNTEBG.com

3rd Floor  
Vishwakarma Chambers  
Majura Gate, Ring Road  
**Surat 395 002**  
Tel: 0261-2473726  
Fax: 0261-2477078  
e-mail: esp-sur@LNTEBG.com

Radhadaya Complex  
Old Padra Road  
Near Charotar Society  
**Vadodara 390 007**  
Tel: 0265-6613610 / 1 / 2  
Fax: 0265-2336184  
e-mail: esp-bar@LNTEBG.com

Door No. 49-38-14/3/2, 1st floor,  
NGGO's Colony, Akkayyapalem,  
**Visakhapatnam - 530 016**  
Phone : 0891 2791126, 2711125  
Fax.: 0891 2791100  
Email: esp-viz@LNTEBG.com

Product improvement is a continuous process. For the latest information and special applications, please contact any of our offices listed here.



### Larsen & Toubro Limited, Electrical Standard Products

Powai Campus, Mumbai 400 072

### Customer Interaction Center (CIC)

BSNL / MTNL (toll free) : 1800 233 5858 Reliance (toll free) : 1800 200 5858

Tel : 022 6774 5858, Fax : 022 6774 5859

E-mail : cic@Lntebg.com / Website www.Lntebg.com

**Registered Office:** L&T House, N. M. Marg, Ballard Estate, Mumbai 400 001, INDIA **CIN:** L99999MH1946PLC004768